




Assembly Instructions *Instructions de montage*


Snap & Grow 6'x8'

254x190x209cm / 100"x74³/₄"x82¹/₄"

Base Size: 245x186cm / 96¹/₄"x73¹/₄"

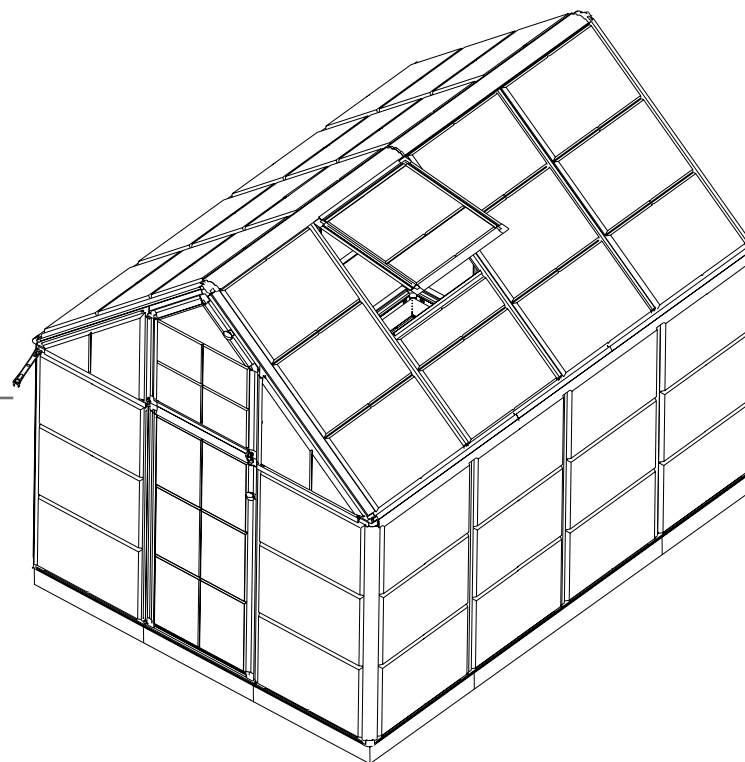

In case of addition SNAP & GROW 6x4 Extension Kit purchase – Please refer to the assembly instruction provided in the 4' Extension Kit Box Only.

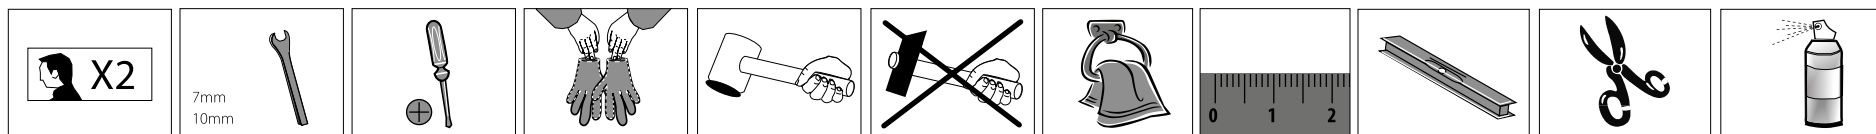

IMPORTANT

Please read these instructions carefully before you start to assemble this greenhouse.
Please carry out the steps in the order set out in these instructions.
Keep these instructions in a safe place for future reference.

⇒ Safety Advice

We strongly recommend the use of work gloves during assembly. Do not attempt to assemble the greenhouse in windy or wet conditions.

Do not touch overhead power cables with the aluminum profiles. Always wear shoes and safety goggles when working with extruded aluminum. Dispose of all plastic bags safely - keep them out of reach of small children. The greenhouse must be positioned and fixed on a flat level surface. Do not lean against or push the greenhouse during construction. Keep children away from the assembly area. Do not position your greenhouse in an area exposed to excessive wind.

Do not attempt to assemble this greenhouse if you are tired, have taken drugs or alcohol or if you are prone to dizzy spells. If using a step ladder or power tools ensure that you follow the manufacturers safety advice. Hot items such as recently used grills, blowtorches, should kept away from the greenhouse walls.

We recommend the greenhouse is bolted to a concrete base or slabs (fix hinges are not supplied). However, if you want to fix directly in to the concrete ensure there are no hidden pipes or cables in the ground before inserting the pegs.

⇒ General Advice

This multi-part assembly is best achieved by two people. Allow at least half a day for assembly process.

Site selection instruction-choose a sunny level position away from overhanging trees. If you are fixing your greenhouse directly to a solid concrete foundation use the pre drilled holes in the metal base supplied. The component parts should be checked and laid out close at hand. Keep all small parts (screws etc.) in a bowl so they do not get lost.

⇒ Care & Maintenance

When your greenhouse needs to be cleaned, use a mild detergent solution and rinse with cold clean water. DO NOT use acetone, abrasive cleaners or other special detergents to clean the clear panels.

For replacement parts - call our service line.

For additional information please visit our web site: www.palramapplications.com

⇒ Care & Maintenance

- | | |
|----------------------------|-------------------------------------|
| • Tape measure | • Step ladder |
| • Work gloves | • Scissors |
| • Plastic or rubber mallet | • Spirit level - For base alignment |
| • Phillipshead screwdriver | • Cloth |

- Sort the parts and check against the contents parts list.
- Carry out the assembly steps in the order set out in the instructions.
- The front of the greenhouse is the wall including the door, and the back is the opposite wall.
- After assembly fit the greenhouse to the base using connectors no. 35 and fit the whole unit to a leveled final
- You may use Silicon lubricant spray in order to help you slide the profiles on the connectors. Do not spray the Polycarbonate panels. Use the rubber mallet if necessary. Avoid shaking the plastic connectors.



⇒ Notes (by steps)

Step 3: Profile 821 should be placed on the left hand side to be connected to profile 822. Profile 821 is the one with the connector at the end.

Step 4: After connecting profiles 816 to each other clean the connection area using a cloth. Place the cover strip on the connection only when it is clean and dry. Press the cover strip from one side of the connection to the other as mentioned in picture 4.

Step 7: Profile 800 & 801 should be aligned and connected according to the illustration on page 7 a & b. Plug 23 should be inserted to each connection while the two dots on the front of the plug should be in horizontal position for easy assembly.

Step 9: Use part 95 as a template in order to measure the gap between posts 800 & 801 of the greenhouse wall and roof area.

Step 11: Profile 806 should be placed on the right hand side. Profile 805 should be placed on the left hand side when viewed from the front.

Step 12: Slide the panel 550 till the end of the rail and insert it into its final position as shown in illustration c.

Step 13: Profile 808 should be placed on the right.

Profile 807 should be placed on the left.

Profile 803 should be placed on the left

Profile 804 should be placed on the right.

Step 16: Be careful to assemble the window in the position as shown on picture 16 a. Profile 809 should be placed while the vent is closed to cover any gap. Ensure profile 809 is fitted correctly as shown on picture 16 b. The lip on 809 should face toward the gutter.

Step 19: Slide the panel 550 till the end of the rail and insert it into its final position as shown in illustration a and b.

Step 20: Step inside the greenhouse and turn all 23 plugs a 1/4 of a turn clockwise.

Step 21: Profiles 814 should be inserted from the four corners of the greenhouse, then insert profile 815 in between them.

Step 23: Ensure you use long screw 450 to secure the door catch 43 as shown in illustration b.

Step 25: Bend the tab lock from the inside after bending the base parts, then lock it using screw 447.

Step 28: You should tighten screw 97 when profiles 807 & 808 are aligned and connected.

IMPORTANT

Lisez attentivement ces consignes avant de commencer le montage de la serre. Suivez l'ordre des étapes de montage.

Respectez les étapes de montage définies dans cette notice.

Conservez ces consignes de montage dans un endroit sûr, pour référence future.

⇒ **consigne de sécurité**

Il est recommandé d'utiliser des gants de travail lors du montage de la serre. N'essayez pas de monter la serre par temps de pluie ou par grands vents.

Veillez à ne pas toucher de fils électriques avec les profils en aluminium. Veillez à toujours porter des chaussures et des lunettes de protection lorsque vous manipulez des copeaux d'aluminium. Rangez soigneusement et à l'abri tous les sacs en plastique, hors de la portée des enfants. La serre doit être posée et fixée sur une surface plane. Veillez à ne rien poser contre la serre lors de son montage ou n'exercer de pression sur elle. Éloignez les enfants de la zone de montage. Ne placez pas votre serre sur une zone exposée à des vents forts (Cette serre ne supporte pas des vents > 70 km/h).

N'essayez pas de monter cette serre si vous êtes fatigué, après avoir pris des médicaments ou bu de l'alcool ou si vous êtes sujet à des étourdissements. Si vous utilisez un escabeau, veillez à suivre les consignes de sécurité du fabricant. Ne laissez jamais dans la serre des objets chauds tels que des grils récemment utilisés, des lampes à souder, etc.

Il est recommandé de fixer la serre au sol. Cependant, si vous voulez la fixer, vérifiez qu'il n'y a aucun tuyau ou câble dans le sol avant d'y enfoncer les pieux.

⇒ **conseil généraux**

Ce montage consiste en un assemblage de pièce, il sera plus simple de le monter à deux. Une demi-journée est nécessaire pour réaliser le montage. Sélection du site : choisissez un lieu ensoleillé et protégé des arbres. Si vous montez votre serre directement sur une base solide en béton, utilisez les trous déjà préparés sur la base en métal fournie. Les pièces du composant doivent être vérifiées et placées à portée de main. Mettez toutes les petites pièces (vis, etc.) dans une coupelle pour éviter de les perdre. Protégez le toit de la neige et des feuilles.

⇒ **Entretien**

PouVr nettoyer la serre, utilisez un produit d'entretien doux et rincez à l'eau froide propre. N'UTILISEZ PAS d'acétone, de produits inflammables ou autres détergents spéciaux pour nettoyer les panneaux transparents. Pièces de rechange - Contactez le service clientèle au : Pour toute information complémentaire, veuillez consulter notre site : www.palramapplications.com

⇒ **Care & Maintenance**

- Mètre
- Gants de travail
- Maillet en plastique ou en caoutchouc
- Tournevis cruciforme
- Escabeau
- Paire de ciseaux
- Niveau
- Chiffon

- Triez les pièces et vérifiez qu'il n'en manque aucune en comparant avec la liste des pièces détachées.
- Suivez l'ordre des étapes de montage.
- Le devant de la serre consiste en la paroi comprenant la porte et le mur opposé constituant l'arrière de la serre.
- Ensuite, assemblez correctement la serre à sa base, en utilisant les connecteurs n°35 et vérifiez que l'ensemble est de niveau.
- Vous pouvez utiliser un spray lubrifiant en silicone afin de vous aider à insérer les profils dans les connecteurs. Veillez à ne pas asperger les panneaux de polycarbonate. Utilisez le maillet en caoutchouc si nécessaire tout en prenant soin de ne pas abîmer les connecteurs en plastique.

⇒ **Notes (by steps)**

Etape 3: Le profil 821 doit être placé sur la partie droite pour être connecté au profil 849. Le profil 821 est celui au connecteur situé à l'extrémité.

Etape 4: Après avoir connecté le profil 816 à tous les autres, nettoyez les zones de connexion avec le chiffon. Ne placez la bande couvrante qu'une fois la connexion sèche et propre. Apposez la bande couvrante de part et d'autre de la connexion, comme mentionné sur l'illustration 4.

Etape 7: Les profils 800 et 801 doivent être alignés et connectés comme indiqué sur l'illustration de la page 7 a et b. Les 23 prises doivent être insérées dans chaque connexion en veillant à ce que les deux points à l'avant de la prise soient à l'horizontal pour un assemblage plus simple.

Etape 9: Utilisez la partie 95 comme modèle afin de mesurer l'écart entre les poaux 800 et 801 du mur et du toit de la serre.

Etape 11: Le profil 806 doit être placé sur la partie droite. Le profil 805 doit être placé sur la partie gauche quand on les regarde depuis le devant de la serre.

Etape 12: Faire glisser le panneau 550 depuis la fin du rail et l'insérez dans sa position finale comme indiqué sur l'illustration c.

Etape 16: Faites attention à bien assembler la fenêtre comme indiquée sur l'illustration 19a. Le profil 809 doit être placé lorsque l'aération est fermée pour empêcher tout écart. Soyez sûr que le profil 809 correspond parfaitement à l'illustration 16b. Le bord du 809 doit être placé en direction de la gouttière.




























Etape 19: Faire glisser le panneau 550 depuis la fin du rail et l'insérez dans sa position finale comme indiqué sur l'illustration a et b.

Etape 20: Entrez dans la serre et tournez les 23 prises à 1/4 de tour dans le sens des aiguilles d'une montre.


























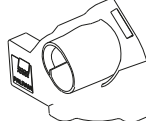




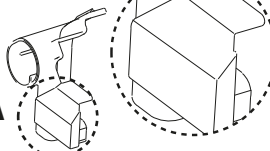



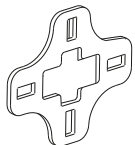
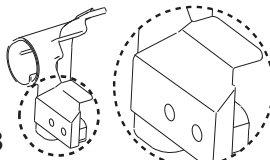








Etape 21: Les profils 814 doivent être insérés depuis les 4 coins de la serre, installez ensuite entre eux le profil 815.

Etape 23: Assurez vous d'utiliser la longue vis 450 pour sécuriser le stopper de la porte comme indiqué sur l'illustration b.







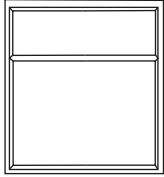
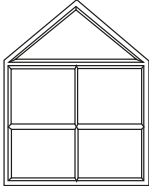


Contents



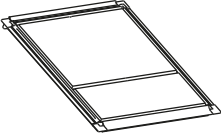
Item	cm/lnc	Qty.	Item	cm/lnc	Qty.	Item	cm/lnc	Qty.	Item	cm/lnc	Qty.	Item	cm/lnc	Qty.
	113cm/44 ¹ / ₄ "	x 6		115cm/45"	x 1		90cm/35 ¹ / ₂ "	x 4		114cm/44 ³ / ₄ "	x 4		11.5cm/4 ¹ / ₂ "	x 4
	112.5cm/44 ¹ / ₂ "	x 6		46cm/18"	x 1		60cm/23 ¹ / ₂ "	x 2		113cm/51 ¹ / ₄ "	x 2		53cm/20 ³ / ₄ "	x 4
	115cm/45"	x 2		46cm/18"	x 1		118cm/46 ¹ / ₂ "	x 2		113cm/51 ¹ / ₄ "	x 2		57cm/22 ¹ / ₂ "	x 1
	46cm/18"	x 1		55.5cm/21 ³ / ₄ "	x 1		118cm/46 ¹ / ₂ "	x 2		115.5cm/45 ¹ / ₂ "	x 4			
	46cm/18"	x 1		56cm/22"	x 1		60cm/23 ¹ / ₂ "	x 2		118cm/46 ¹ / ₂ "	x 2			
	115cm/45"	x 1		118cm/46 ¹ / ₂ "	x 4		57.5cm/22 ³ / ₄ "	x 2		57.5cm/22 ³ / ₄ "	x 2			

Contents




Item	Qty.	Item	Qty.	Item	Qty.	Item	Qty.	Item	Qty.
 8  25  7020	x 1	 21 spare	x 4 x 1	 43	x 1	 22 spare	x 8 x 1	 411 spare	x 12 x 1
 26  8  7021	x 1	 23 spare	x 9 x 2	 46	x 2	 28	x 2	 466 spare	x 42 x 1
 7  25  7022	x 1	 35 spare	x 28 x 8	 47	x 2	 29A 29A	x 2	 461 spare	x 30 x 1
 26  7  7023	x 1	 96 96	x 8	 48	x 2	 29B 29B	x 1	 463 463	x 4
 300 140cm/55"	x 1	 97 97	x 2	 49A 49A	x 1	 40 40	x 1	 422 spare	x 16 x 1
Carton Spacer  95 56.5cm/22 1/2"	x 1	 98B 98B	x 2	 49B 49B	x 1	 44 44	x 1	 465 spare	x 16 x 1
		 98A 98A	x 2			 464 464	x 8		
		 100 100	x 1			 462 462	x 4		
		 447 16mm spare	x 10 x 1						
		 450 32mm spare	x 2 x 1						



Contents

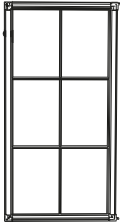Item	Qty.
 250 126cm/49 ¹ / ₂ "	x 4
 251 65.4cm/25 ³ / ₄ "	x 2
 252 126cm/49 ¹ / ₂ "	x 2
 459	x 1
 460	x 2
 7011	x 20
 7010	x 1
 553	x 1
 559	x 2
 560	x 2



Item	Qty.
 556	x 1
 557	x 1
 554	x 1




Spare Parts

	
	x 1
 #4	x 1

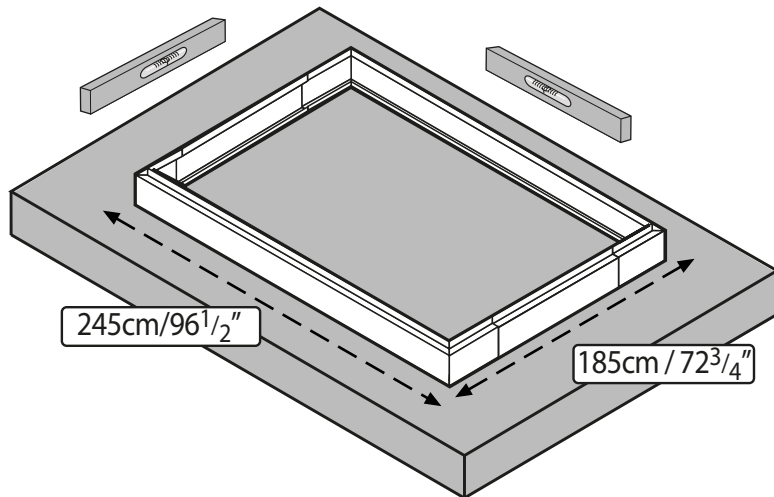

OR

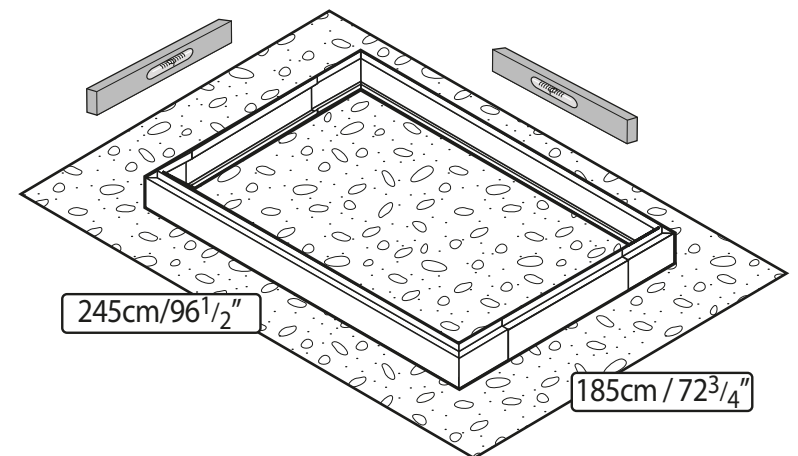


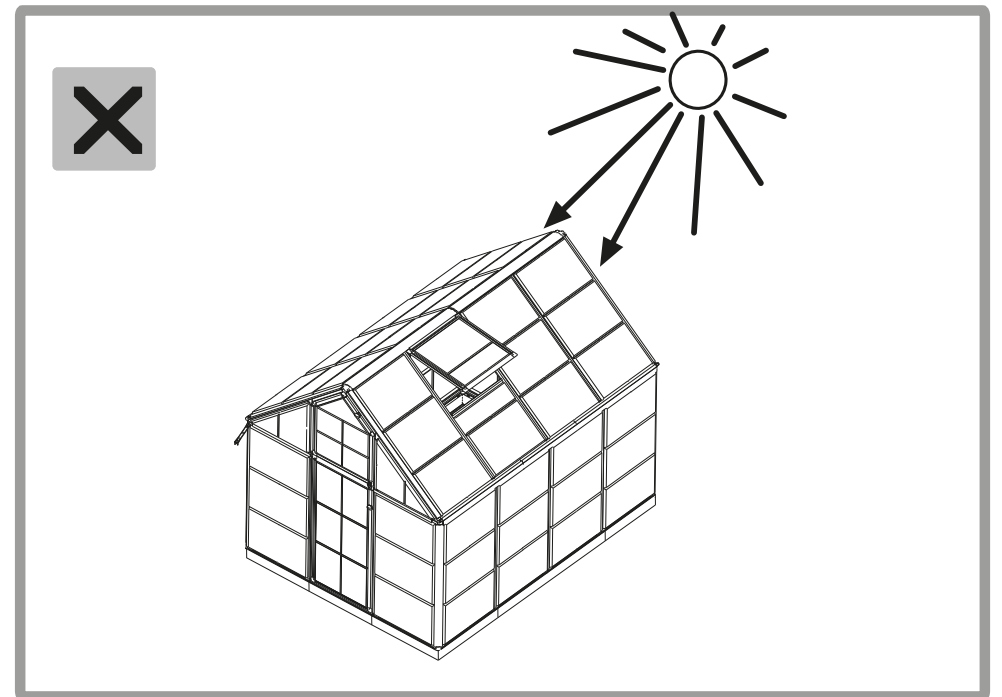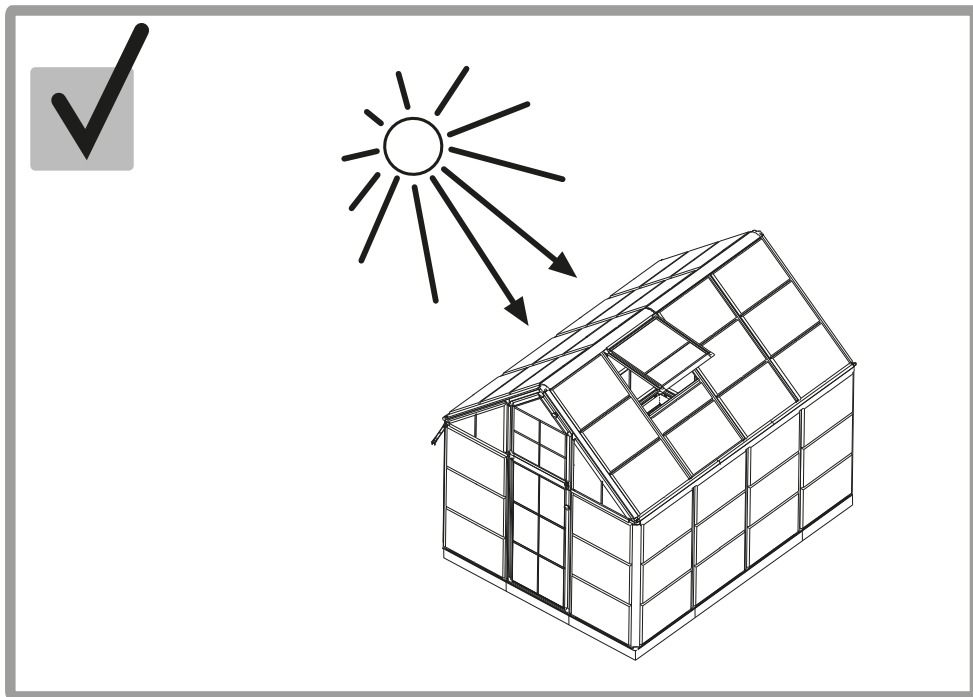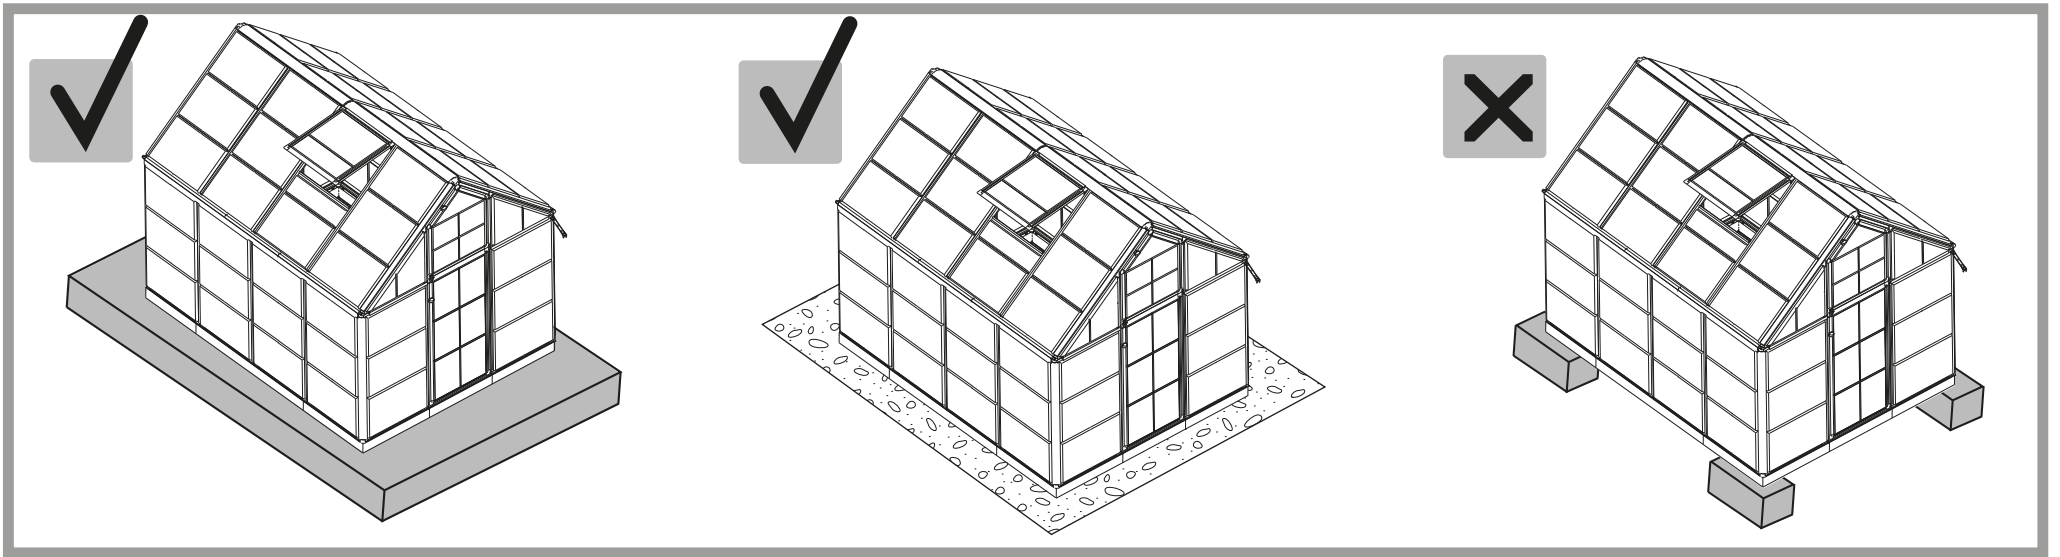

818 x 2



825 x 2




817 x 2





824 x 2





819 x 2







820 x 4




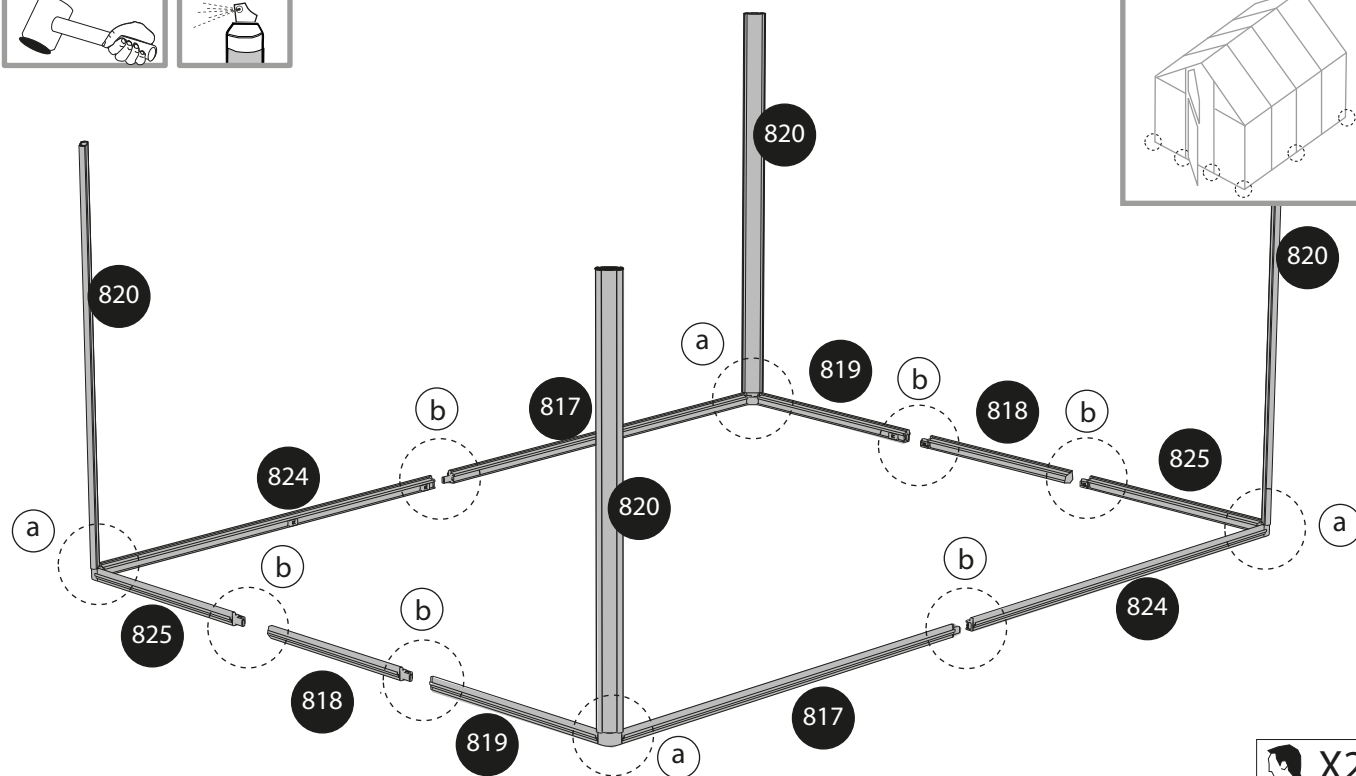



X2

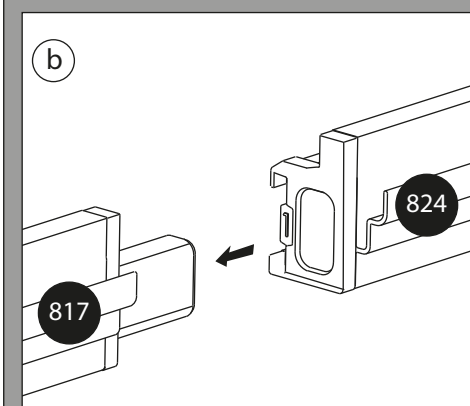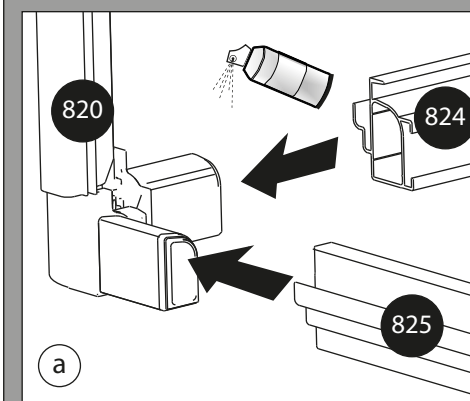





2

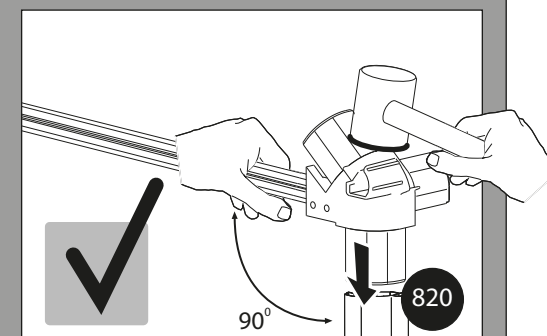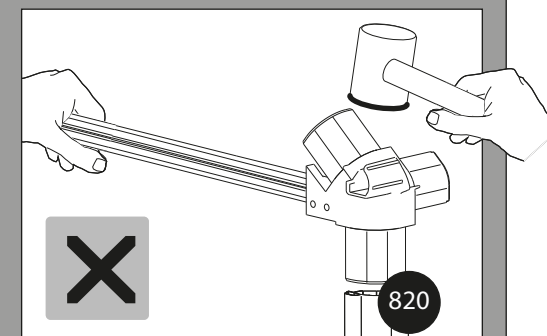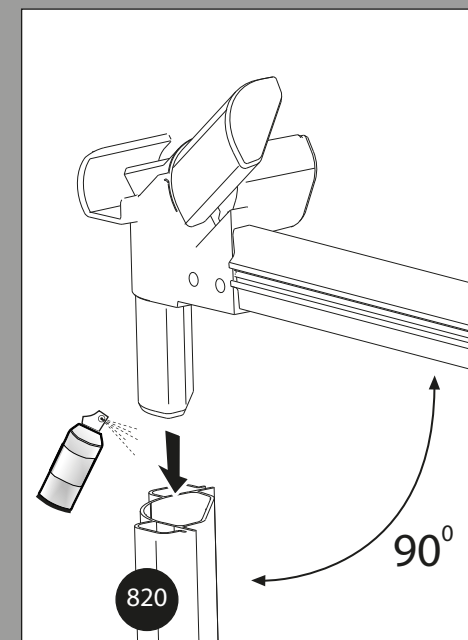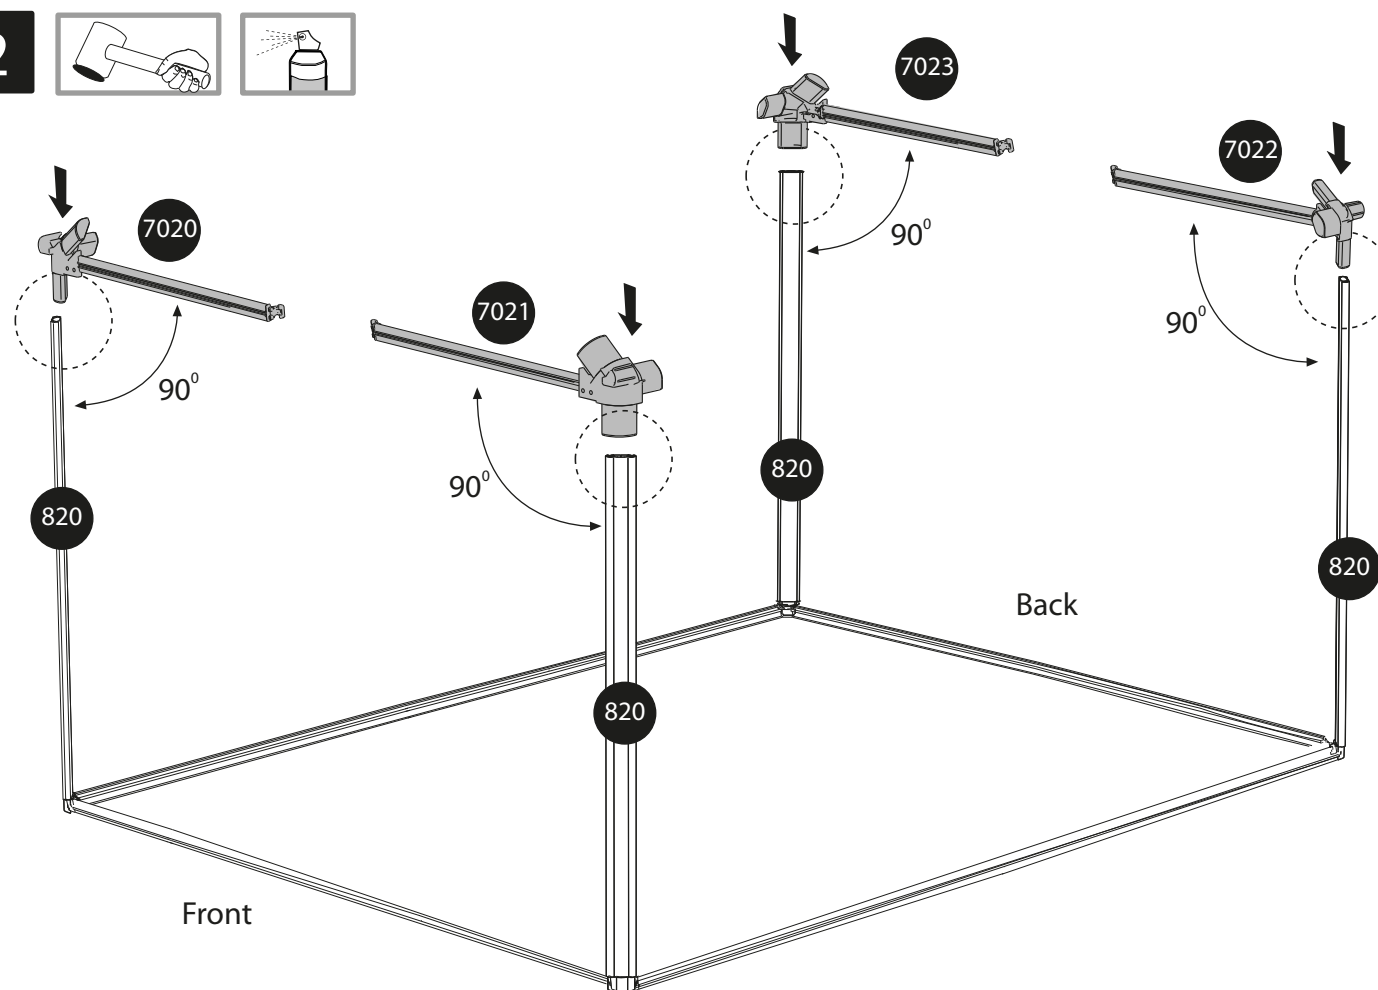



821 x 2

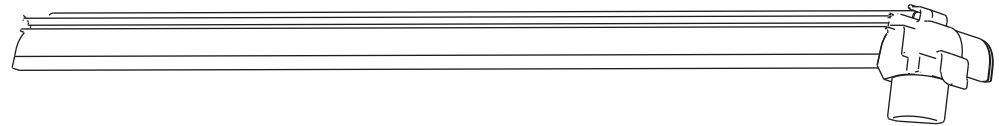

822 x 2




3

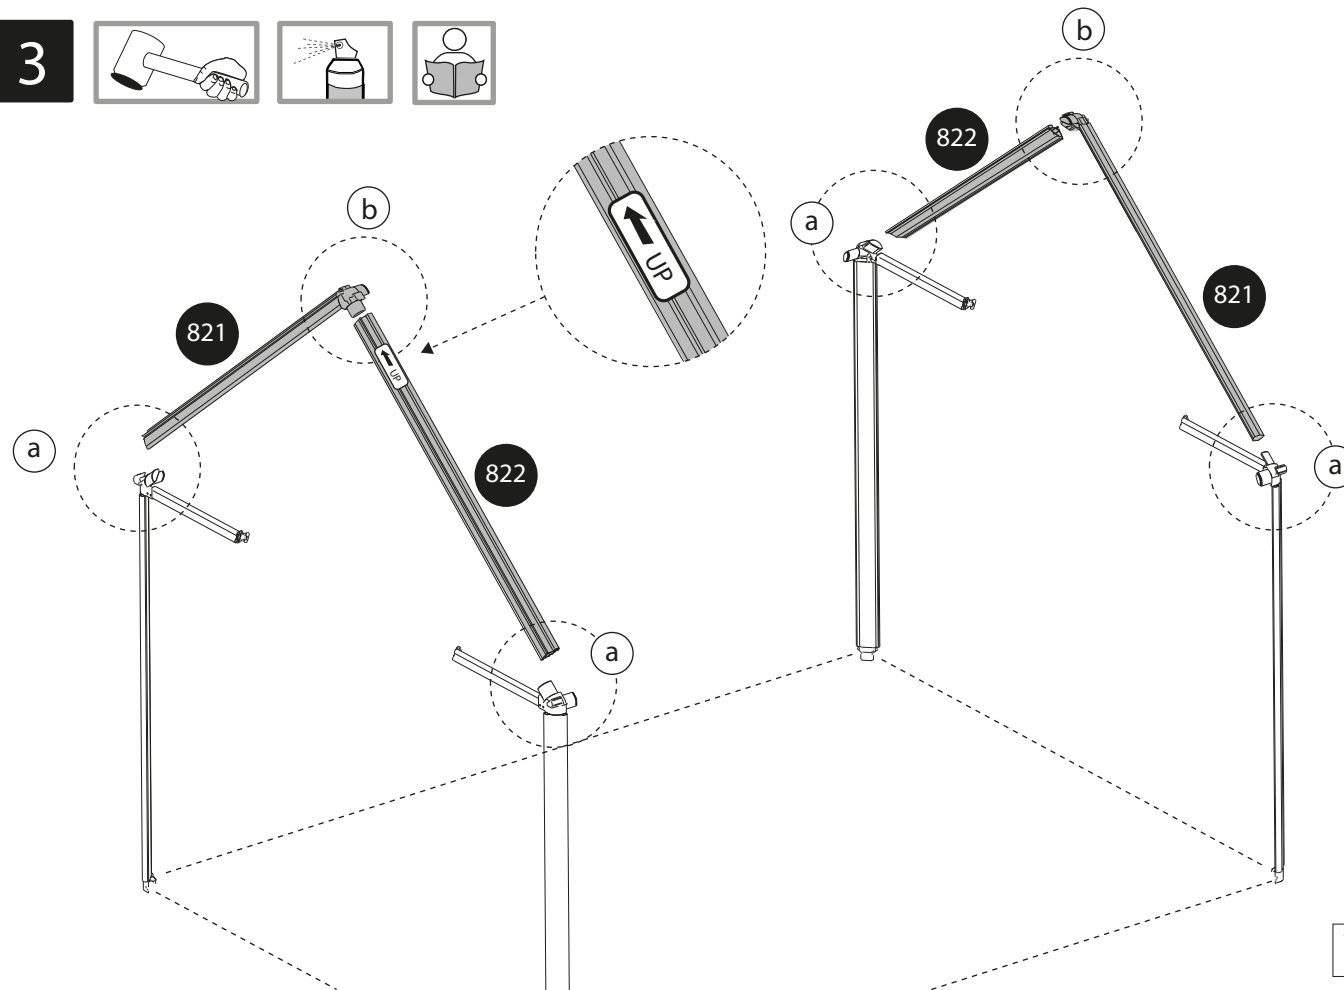


X2


a

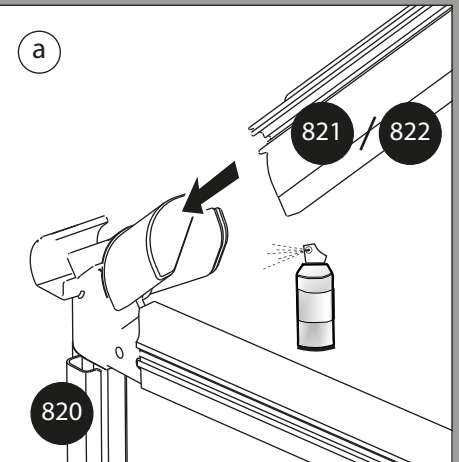


b

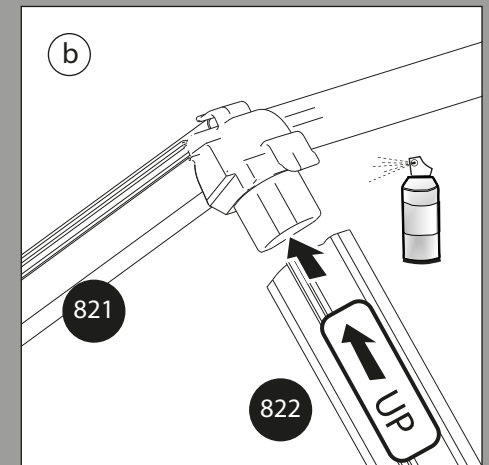





816 x 2







100 x 1



4

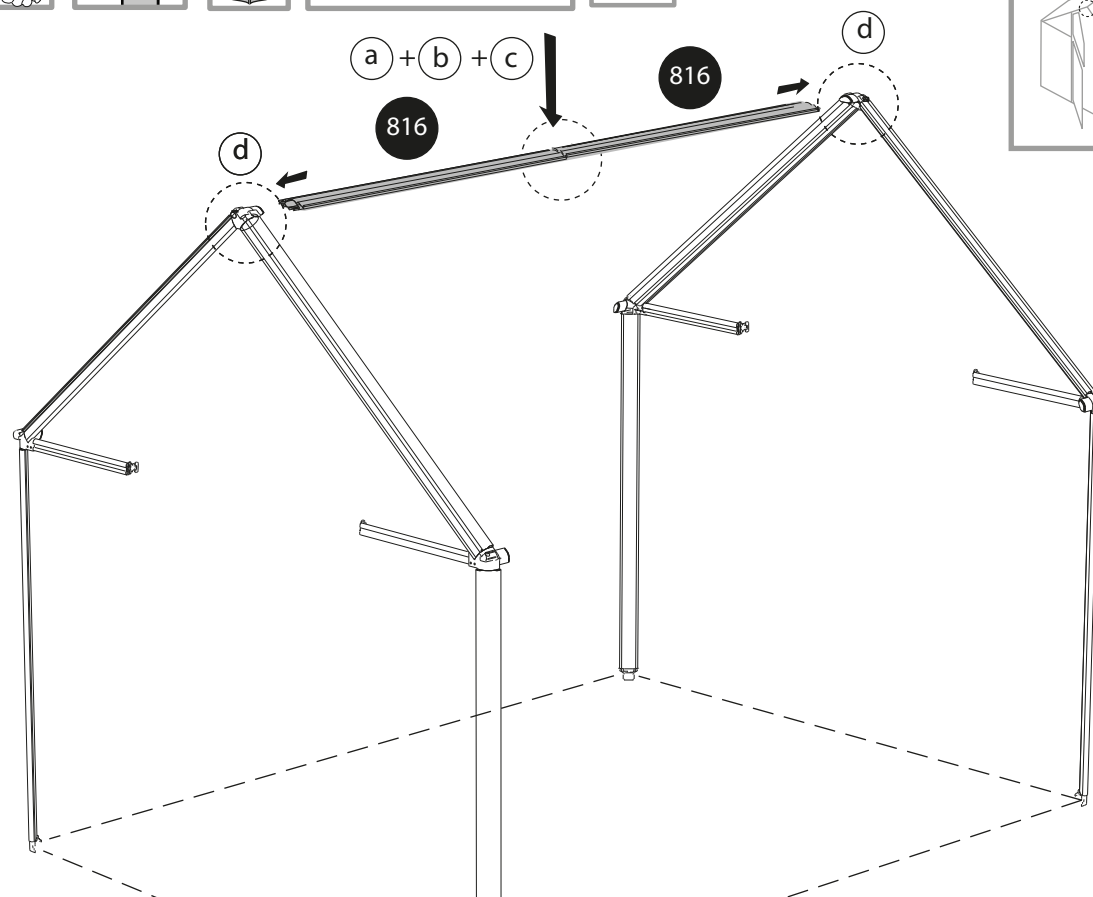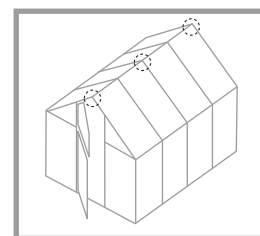

X2

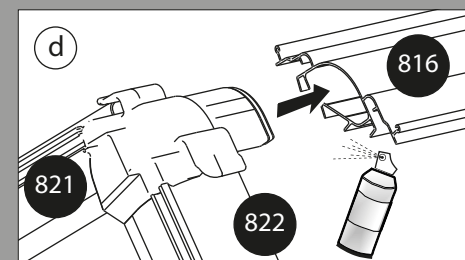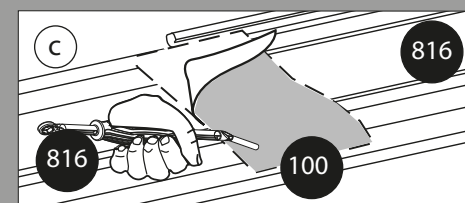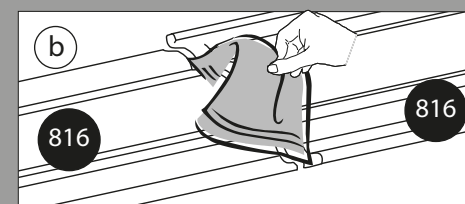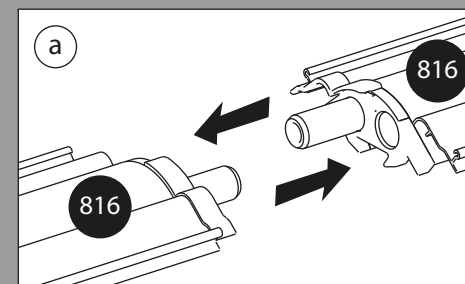


813



x 4



5

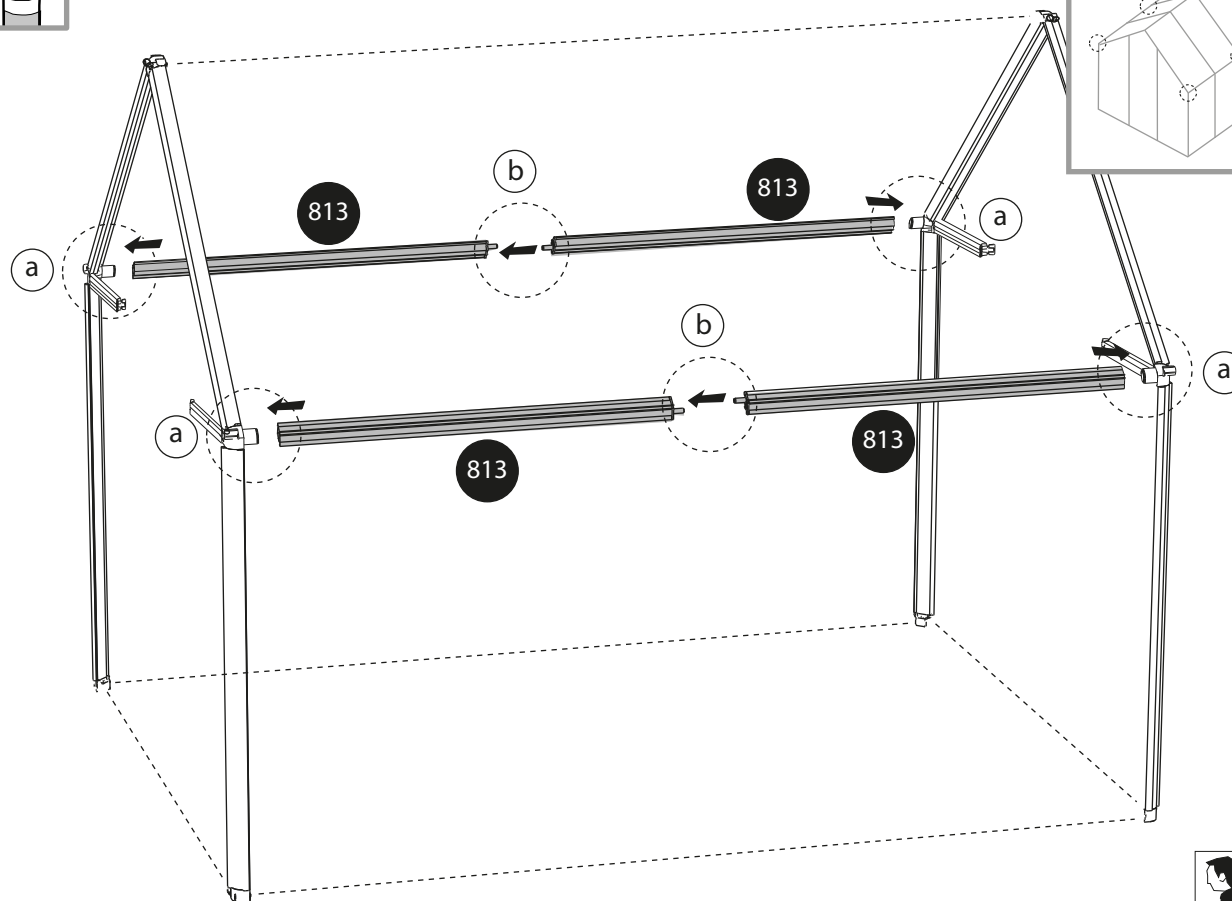


X2

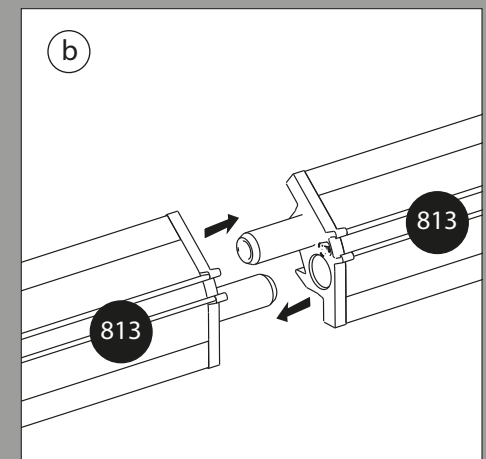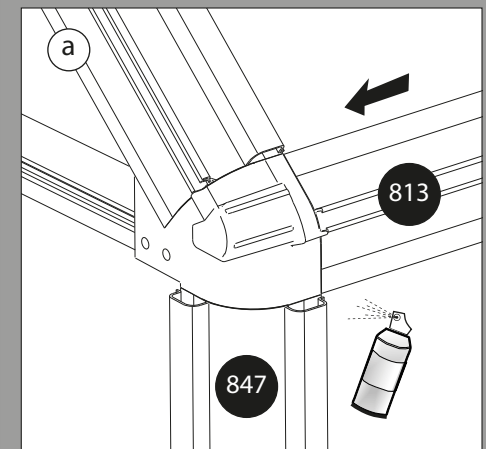


801

x 2




6

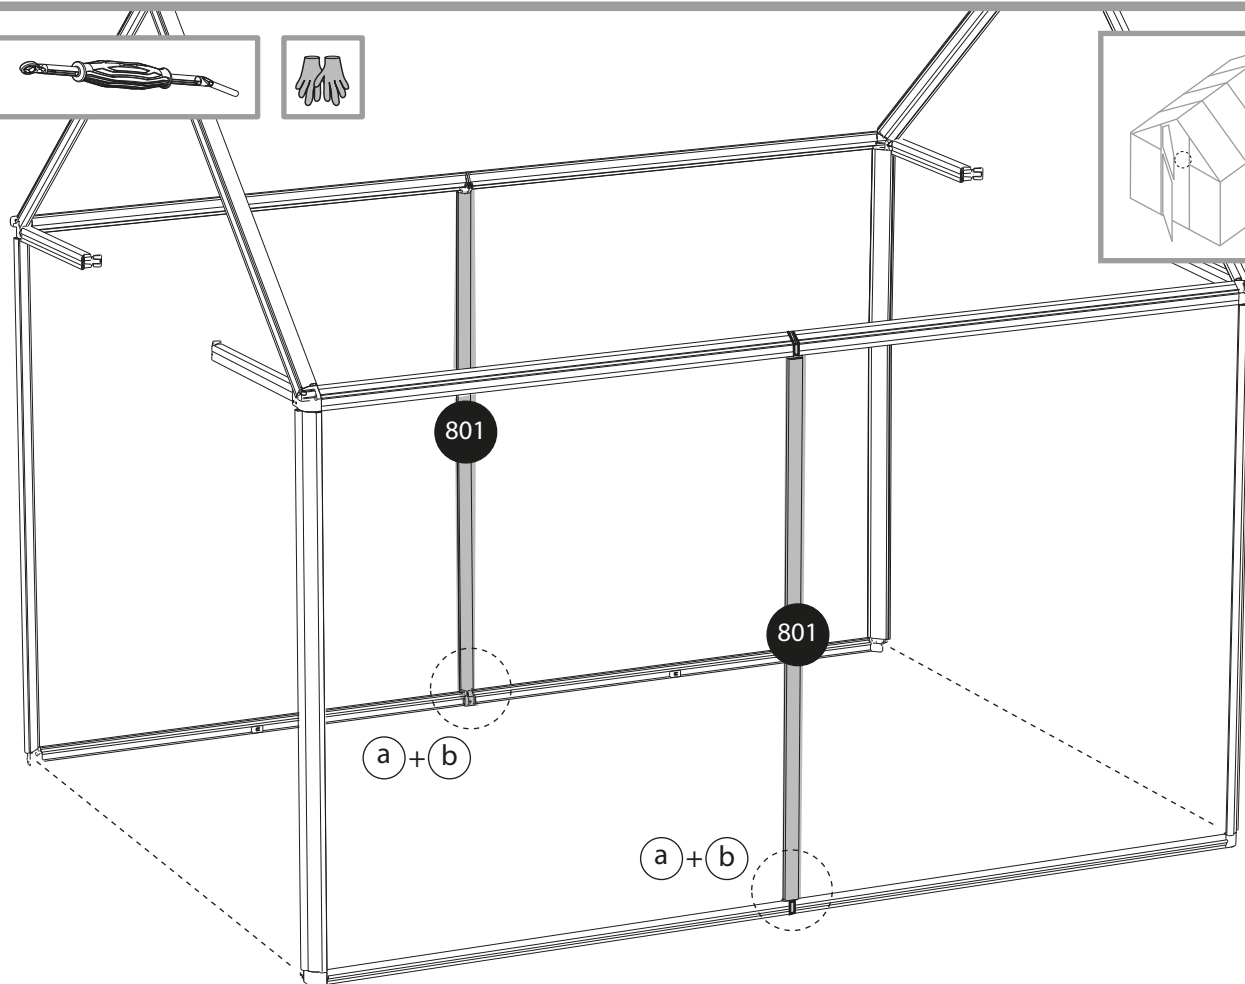


a

1

801

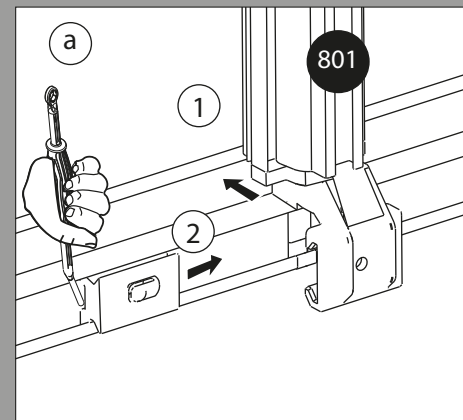


801

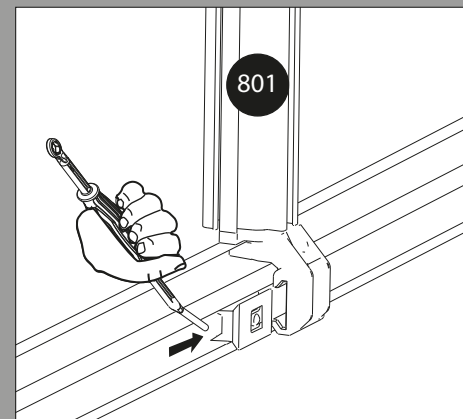


b

801

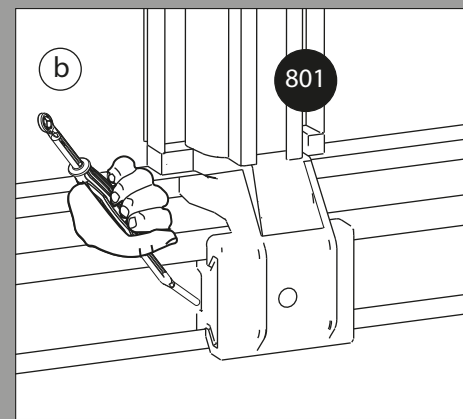

800

x 2





23

x 3




7








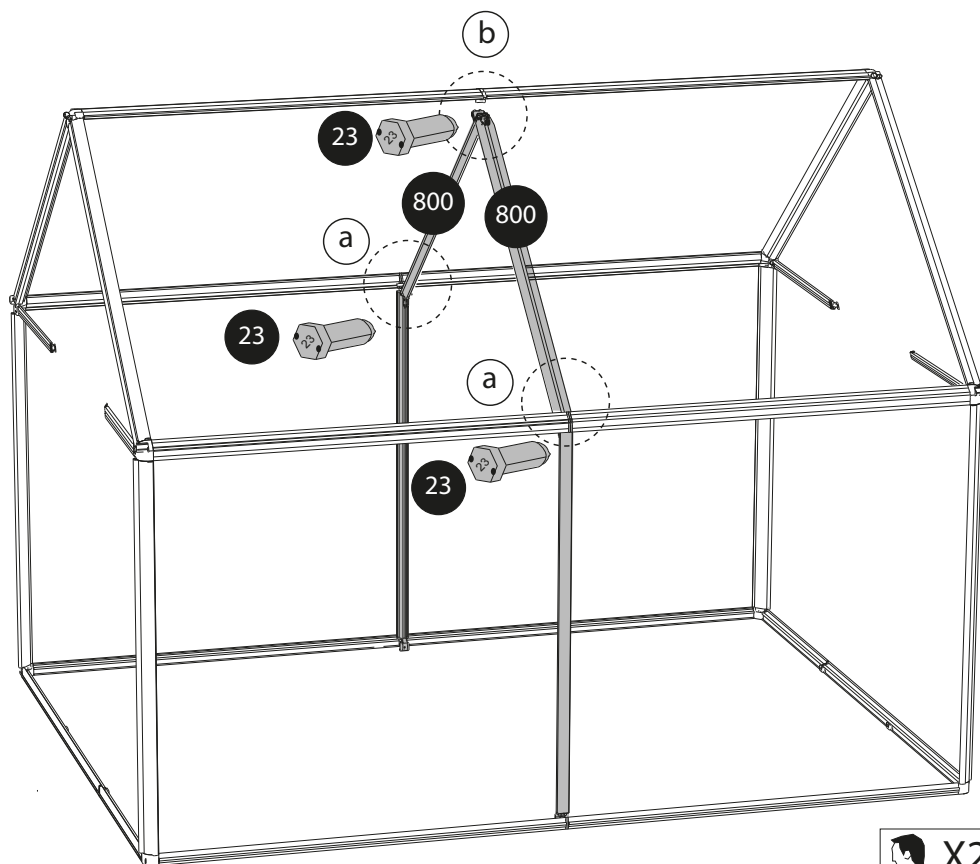
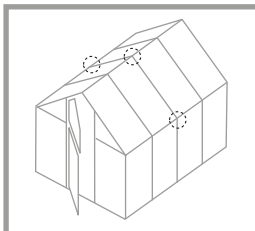


X2


a

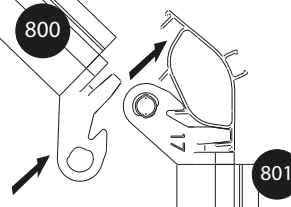


b

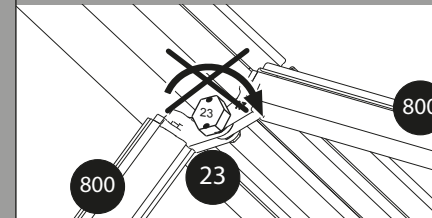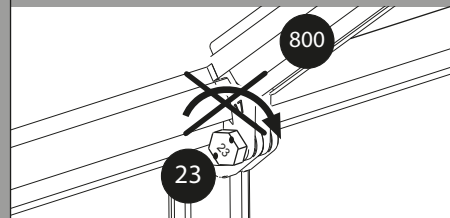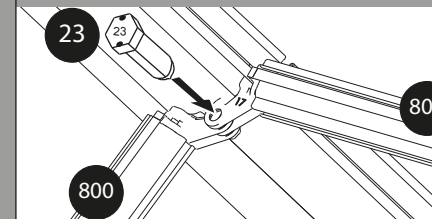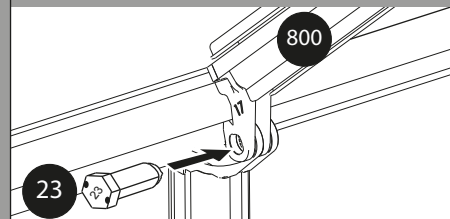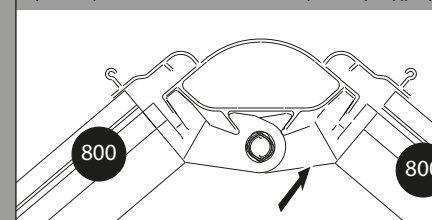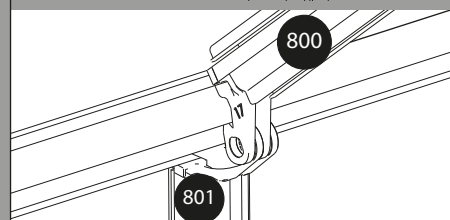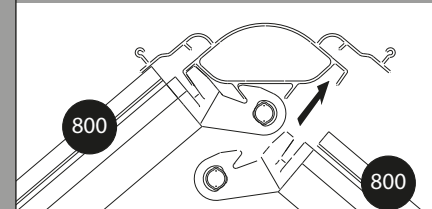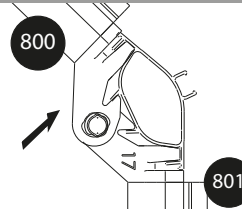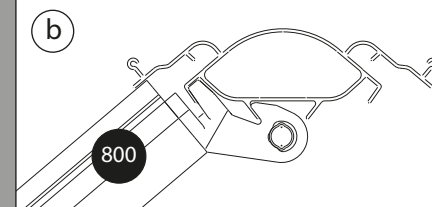


23 x 6




95 x 6



801 x 4







800 x 4



8




Carton Spacer

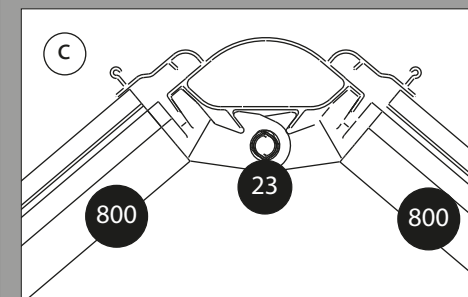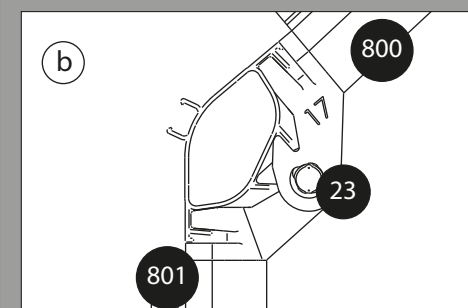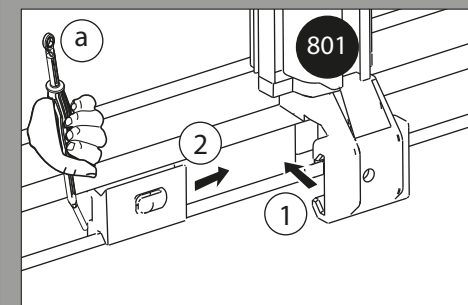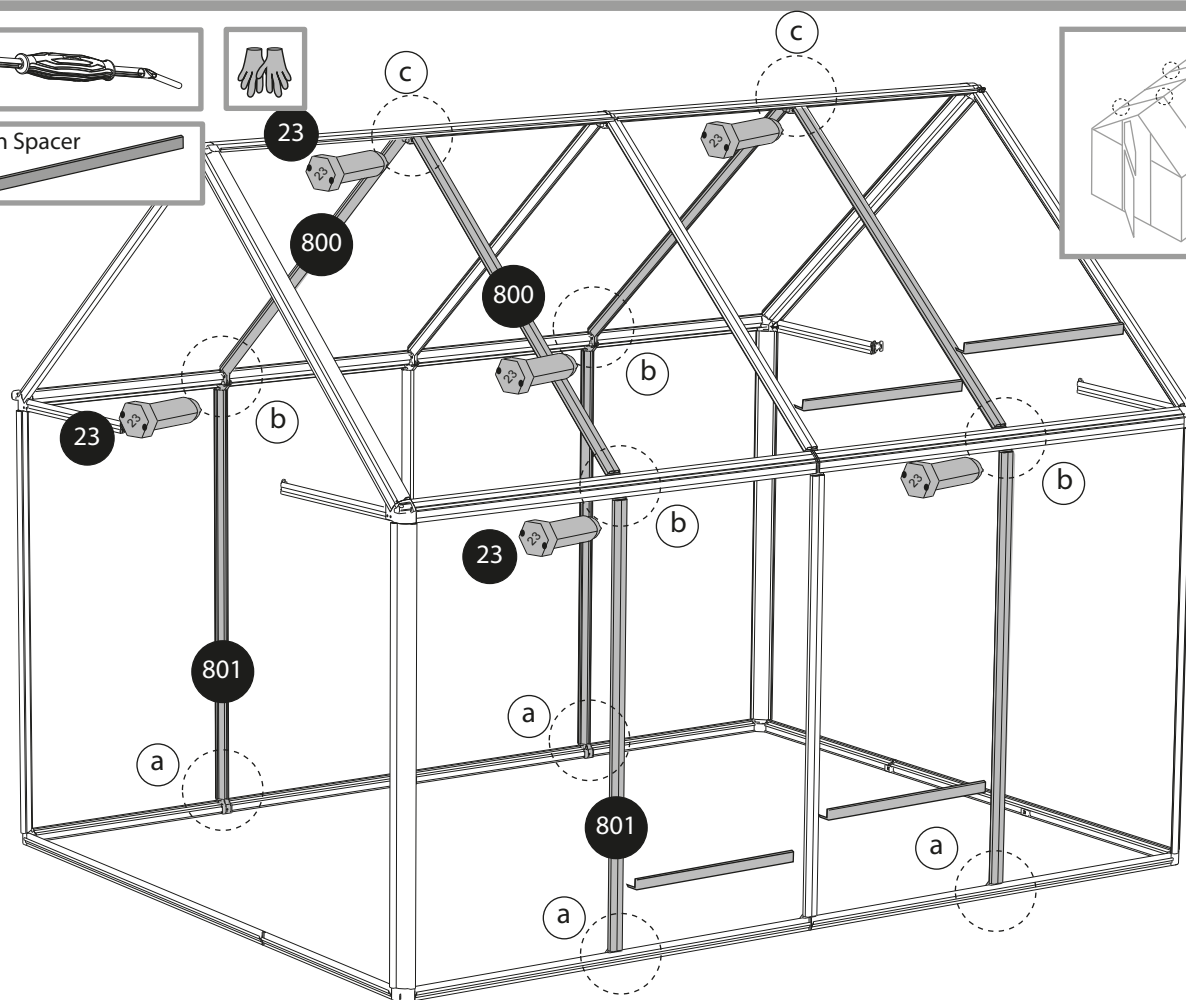





95

x 1




9

Carton Spacer

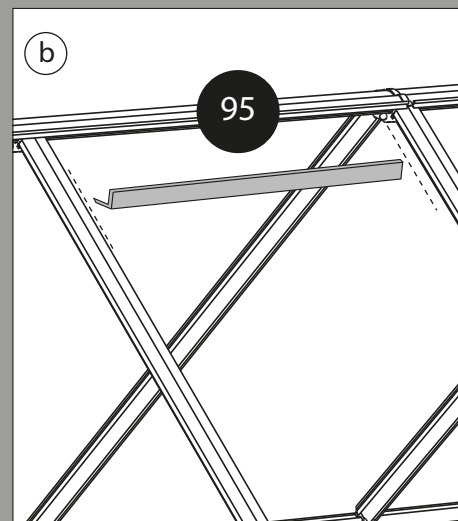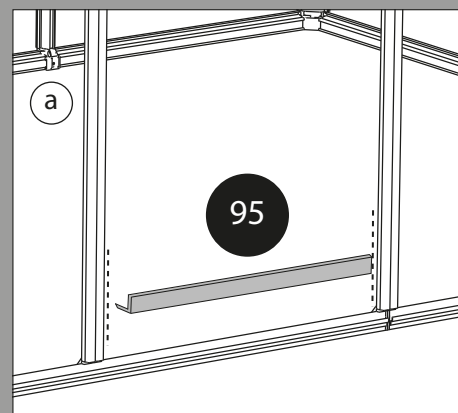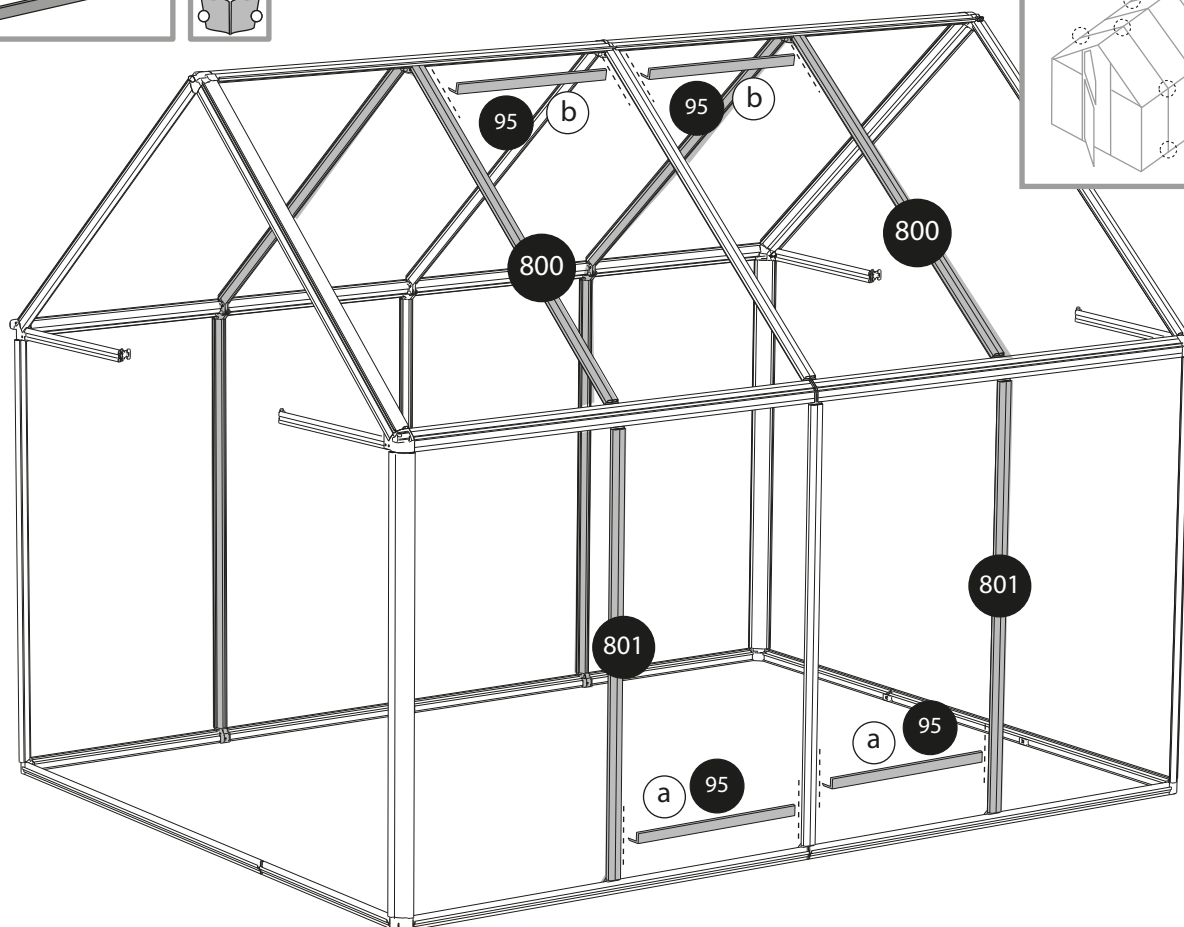


805

x 1



806

x 1





802

x 2




10

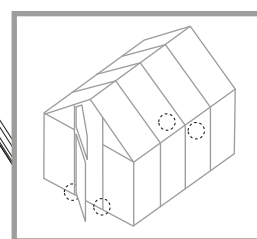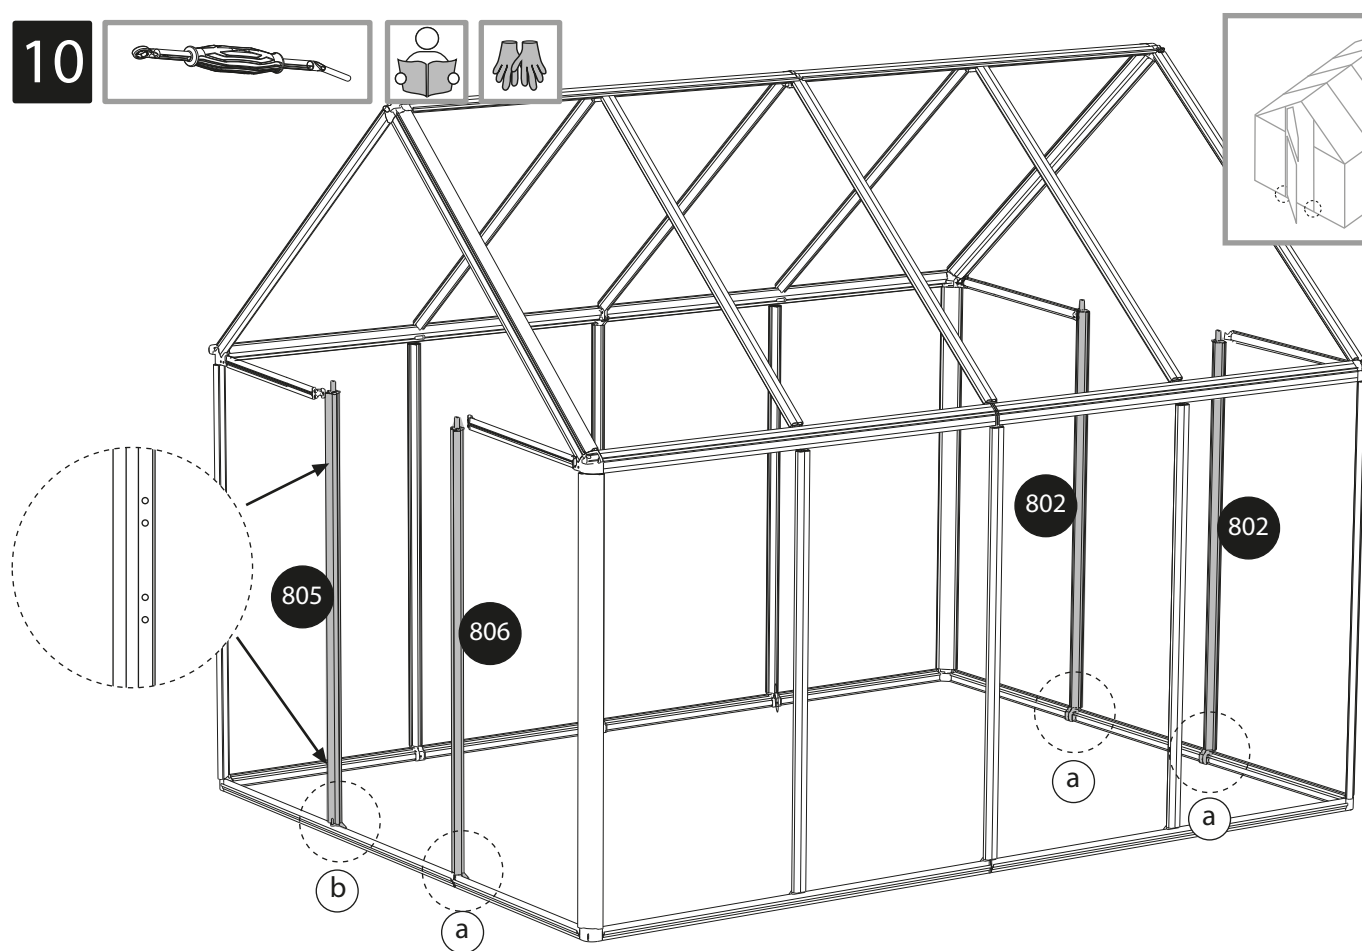

a


806

802

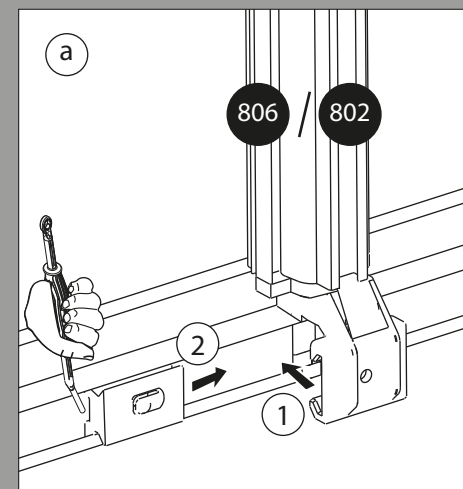


b

805

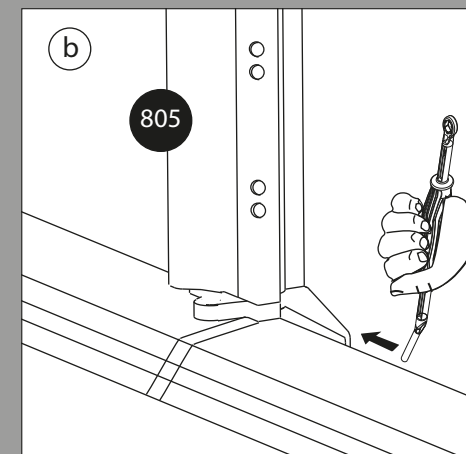


7011


x 5

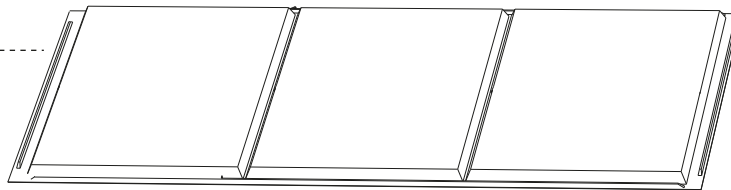


11

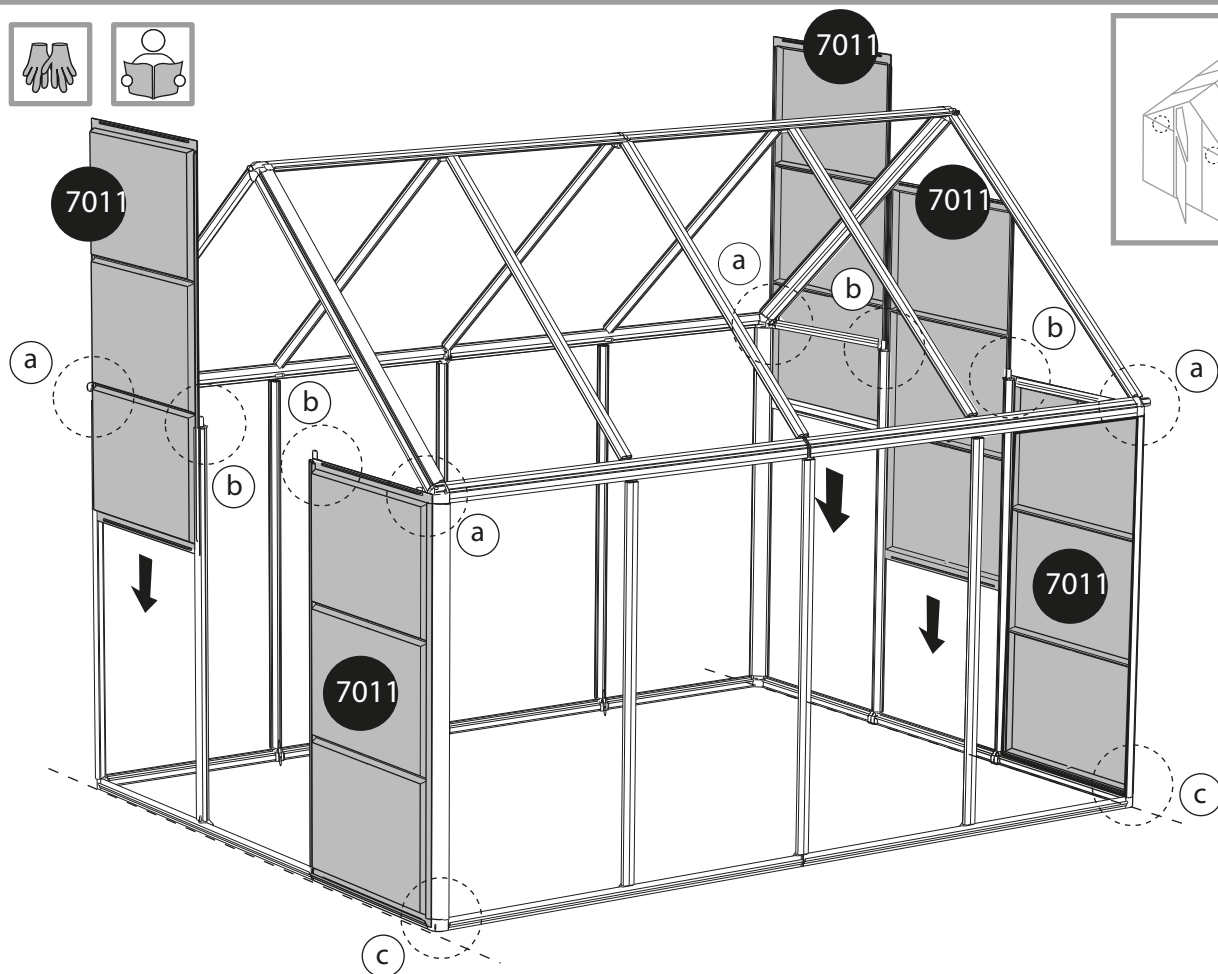


a

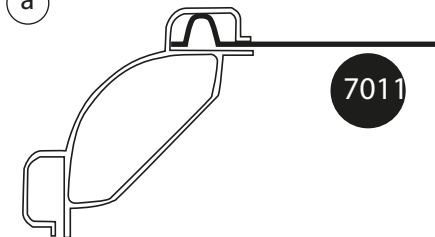

b

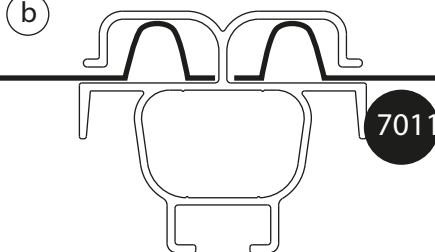


c

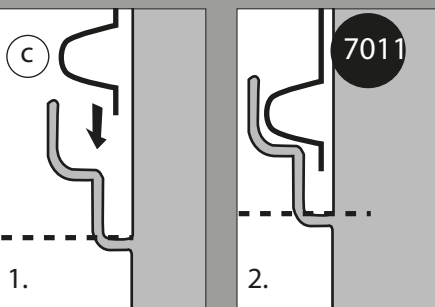

807

x 1



808

x 1



804

x 1




803

x 1



21

x 4





22

x 2




12

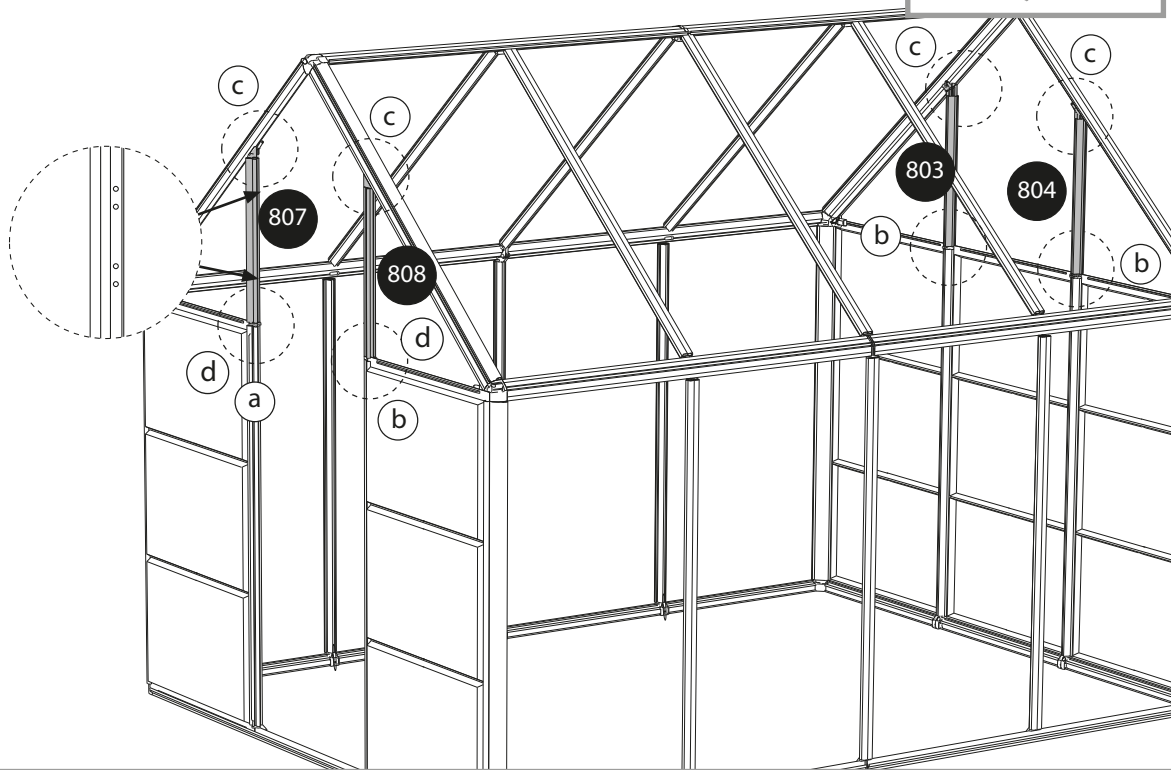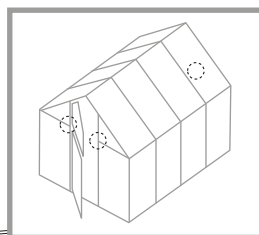


a

807




b

808

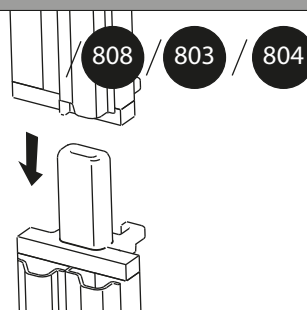


c

21

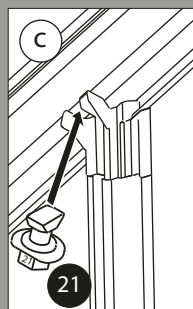


21

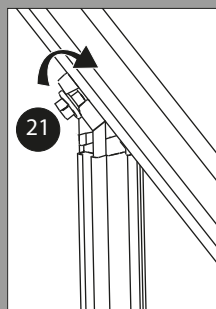


d

2


22

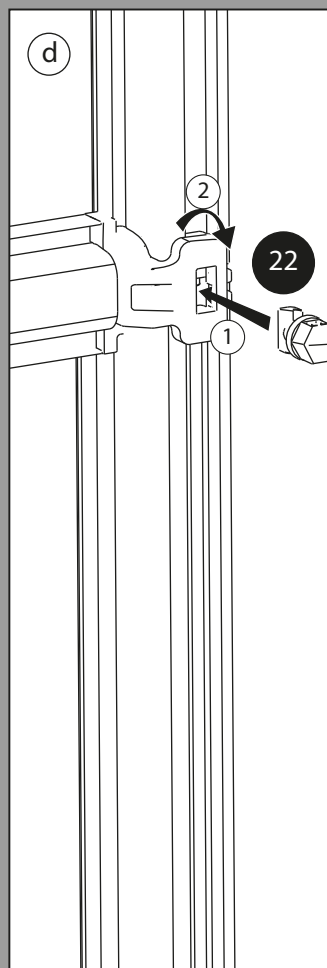






810 x 1



22 x 2




13

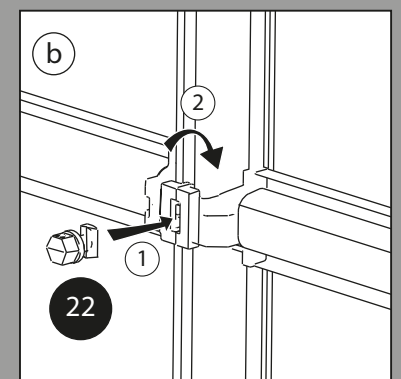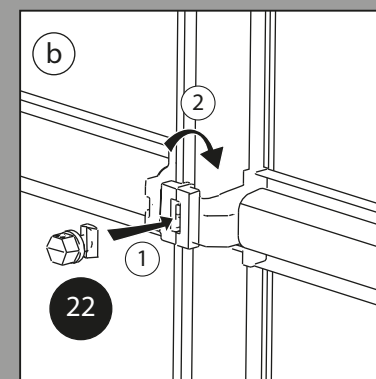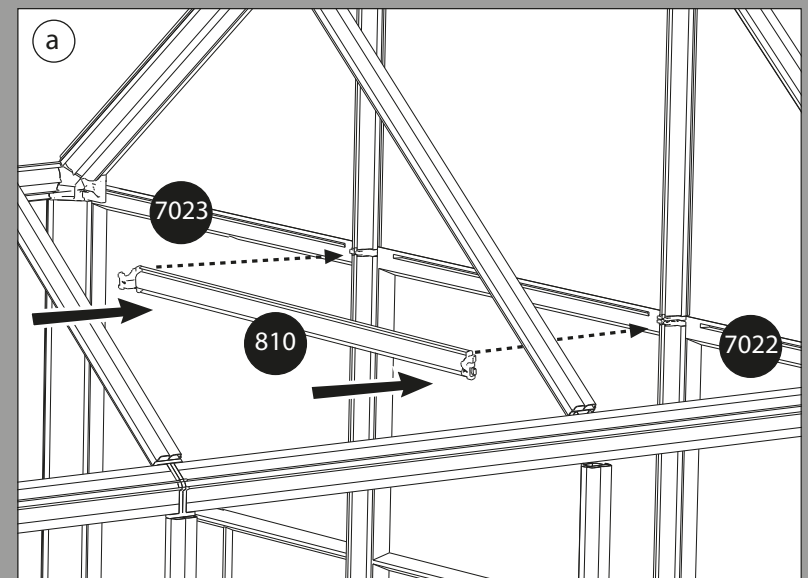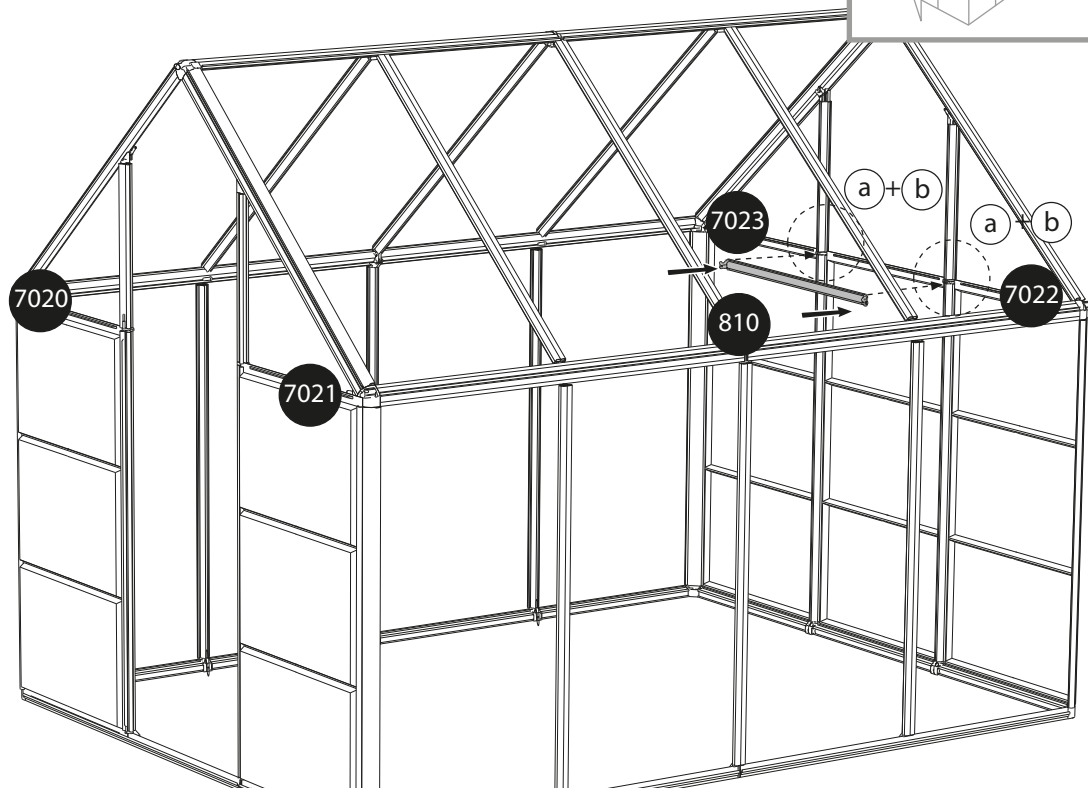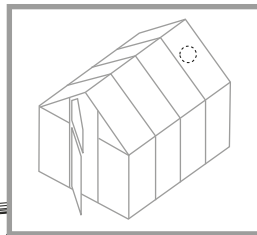


559

x 2

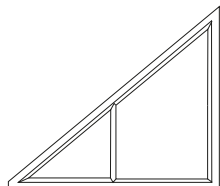


560

x 2


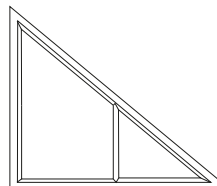


553


x 1

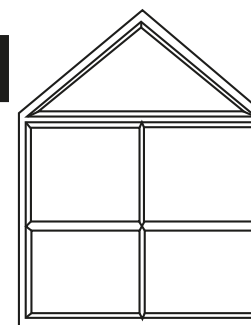


14

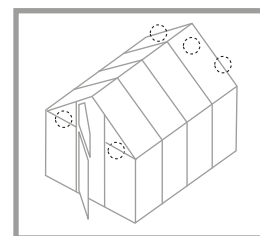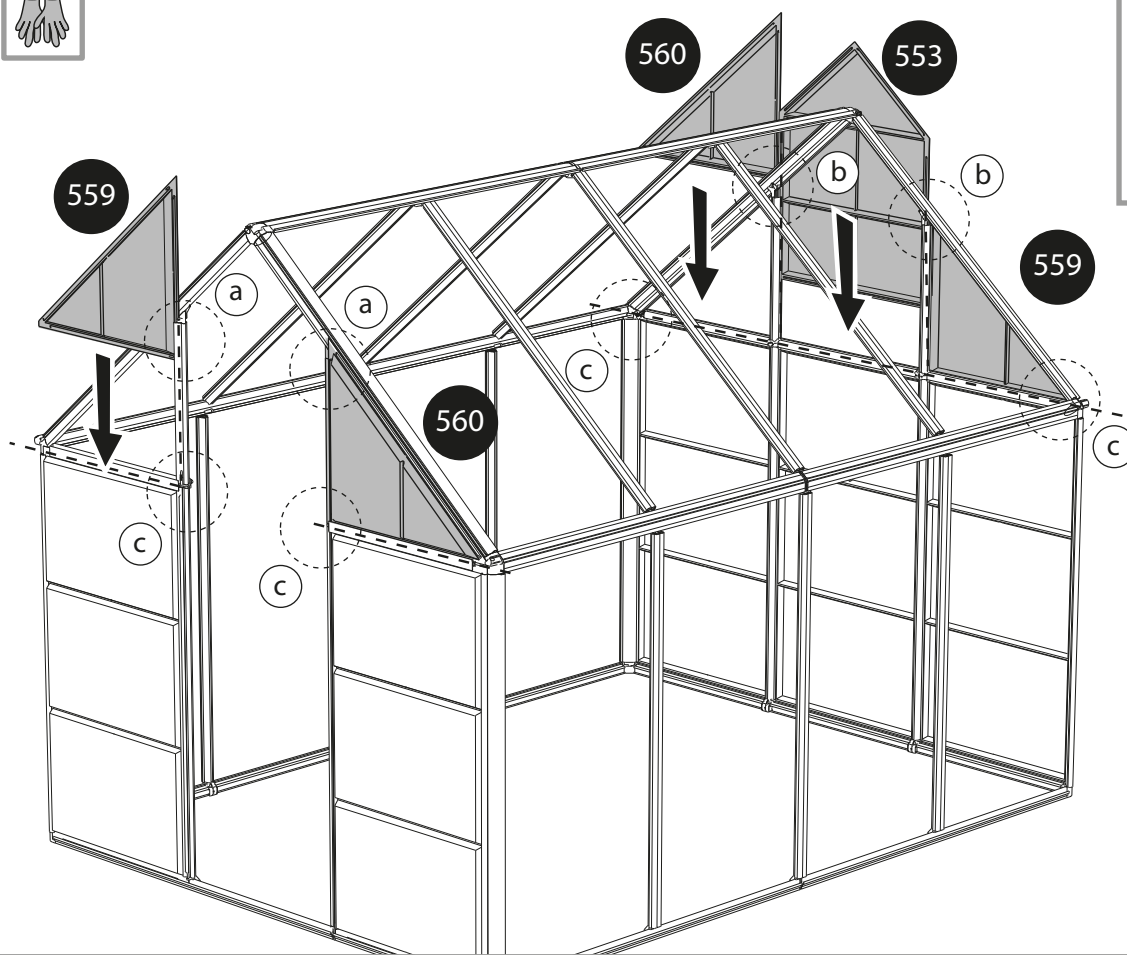


a

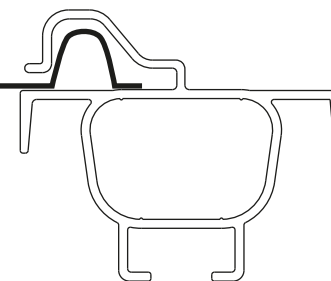


b

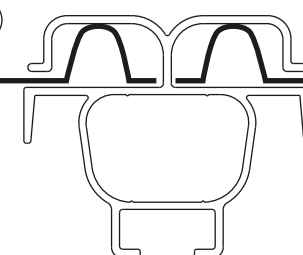


c

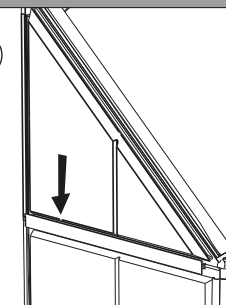


809 x 1









22 x 2



554 x 1

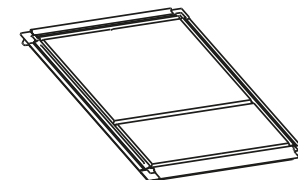


15

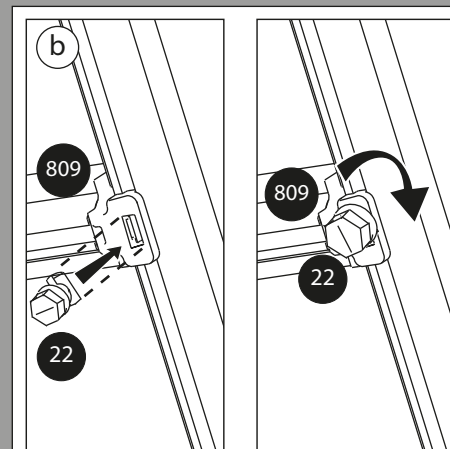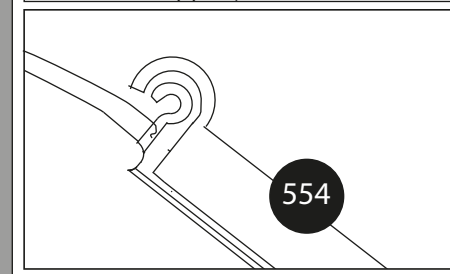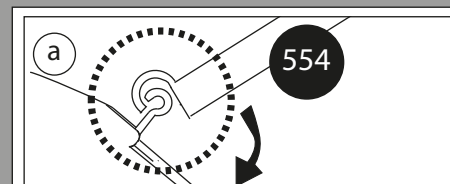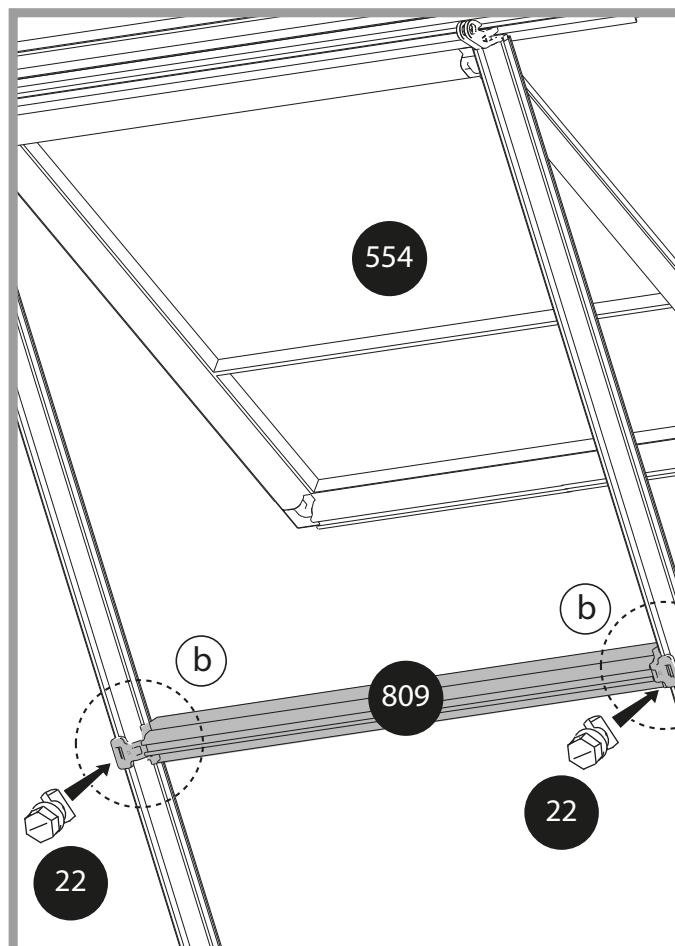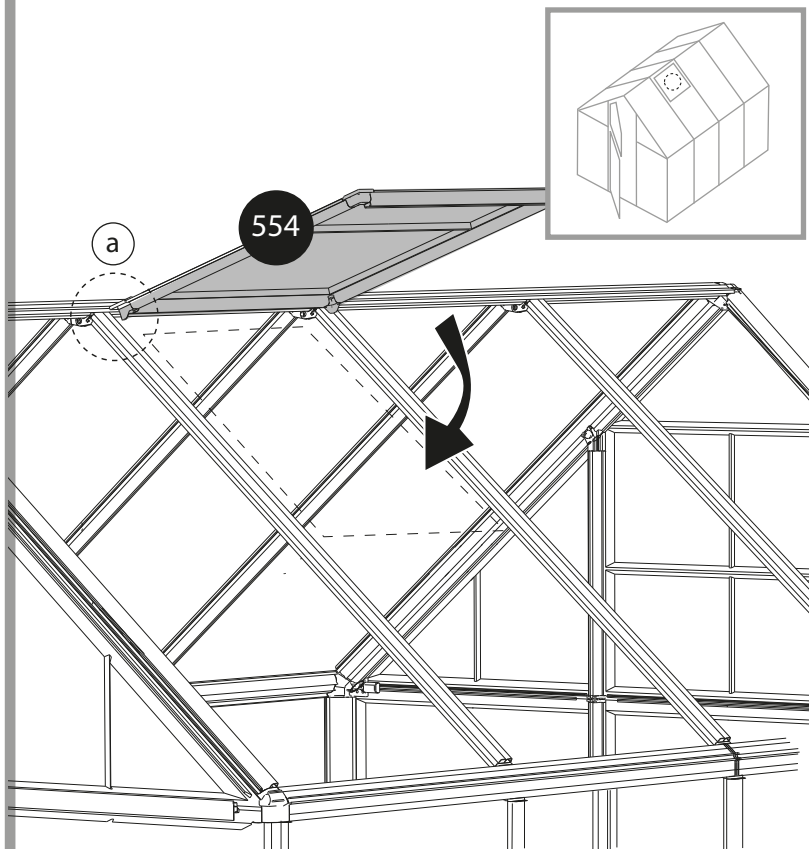
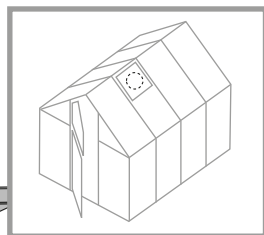


7010


x 1

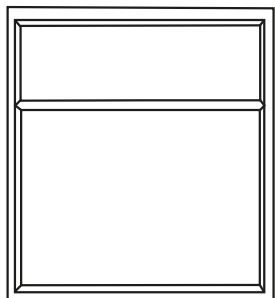

16

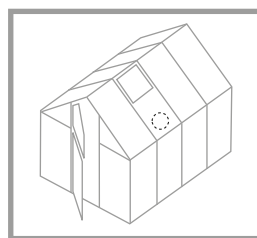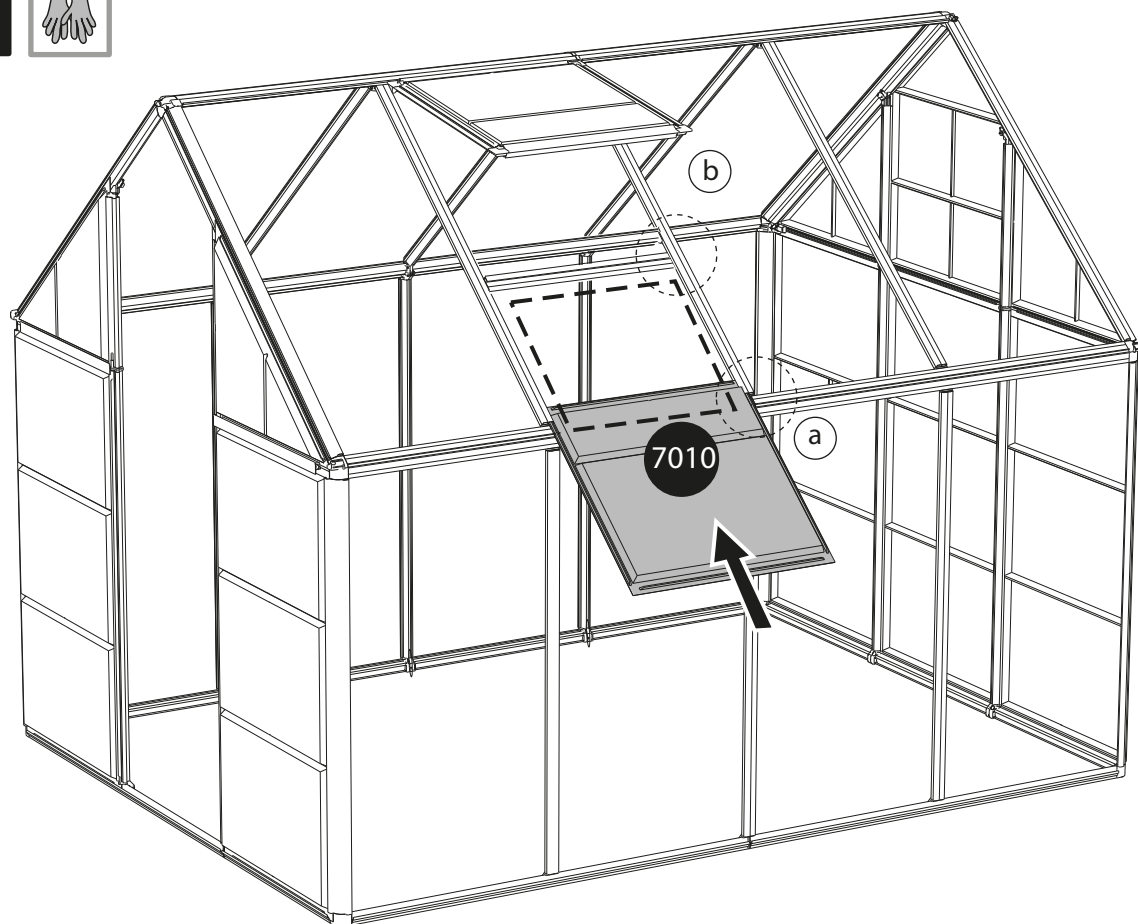


a



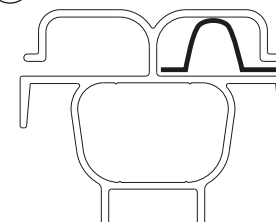


7010

b

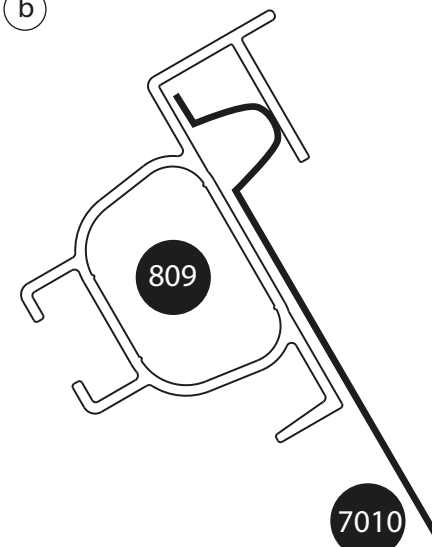


X2


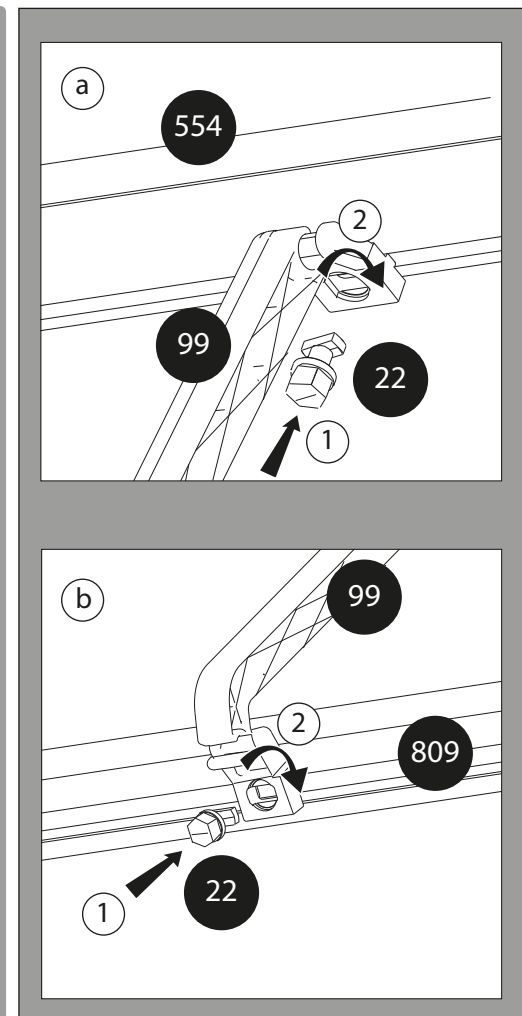
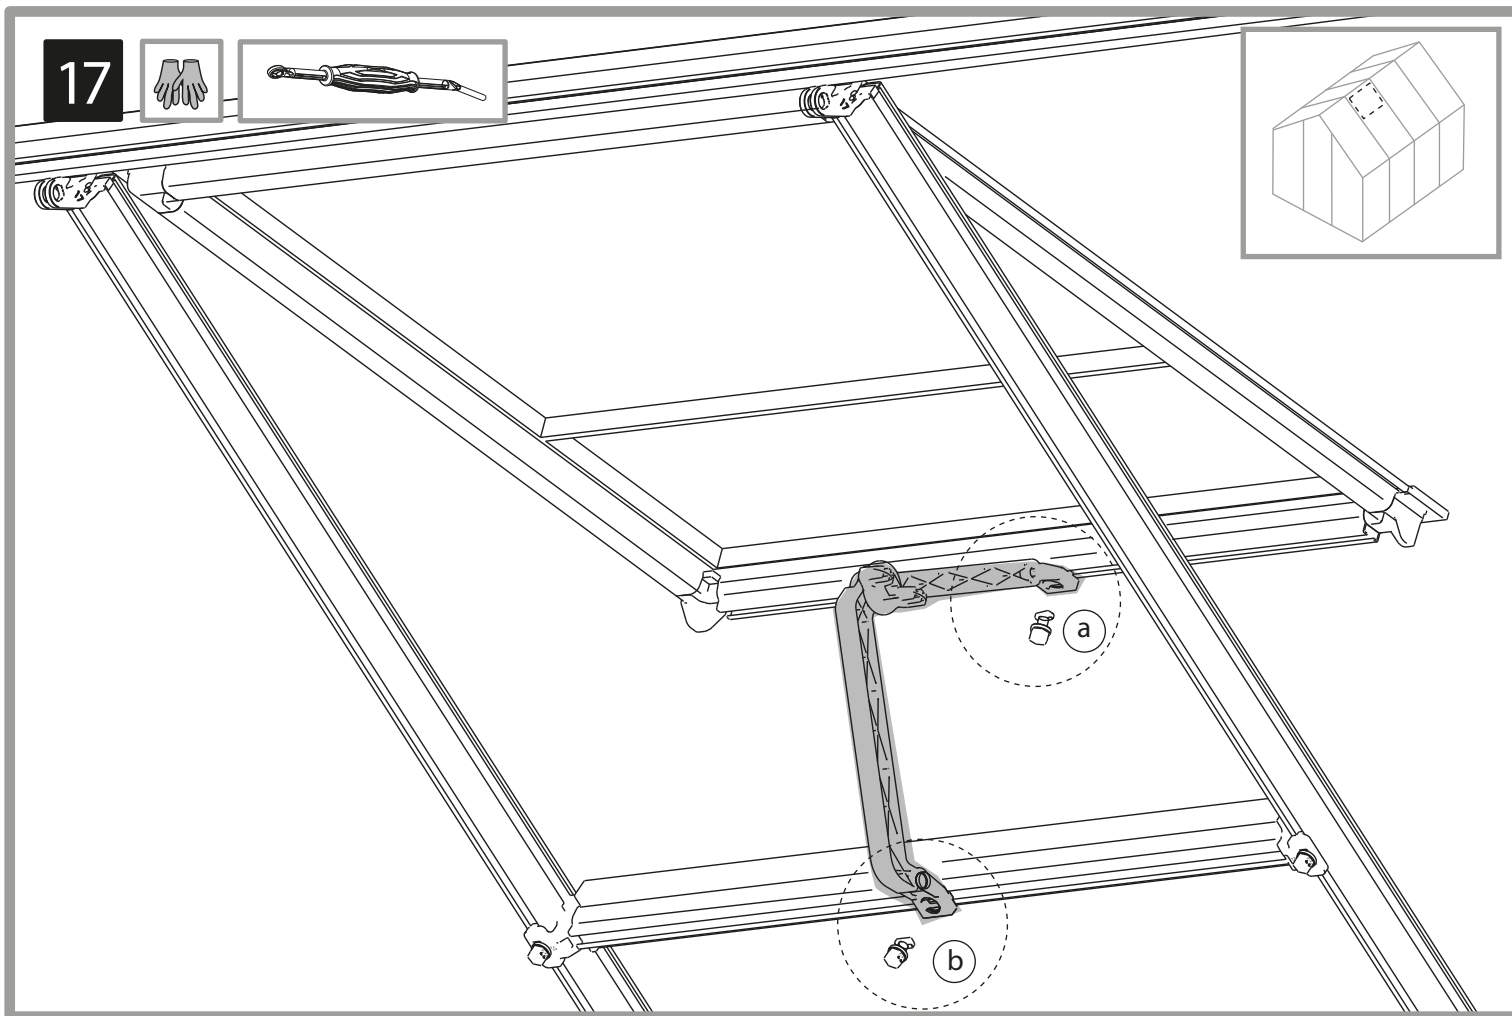
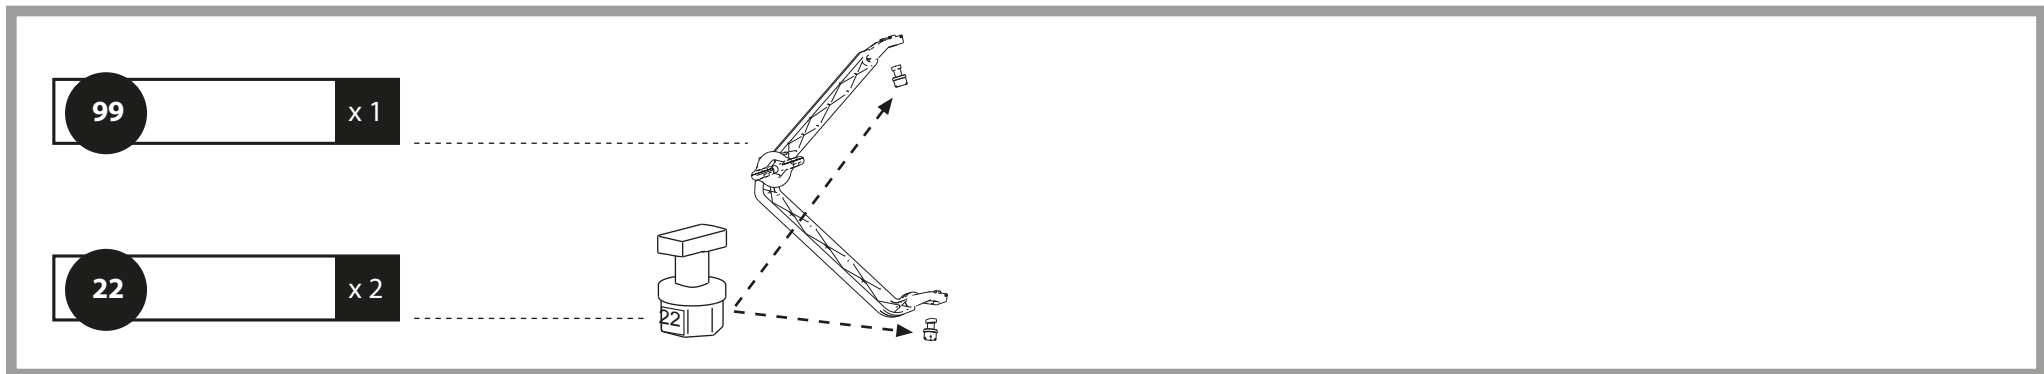


7011

x 15




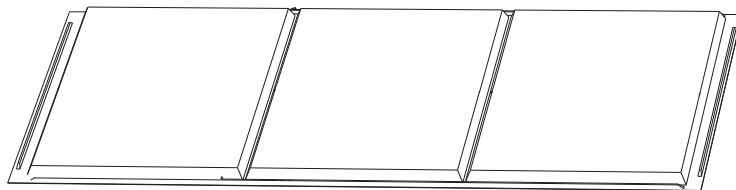


18

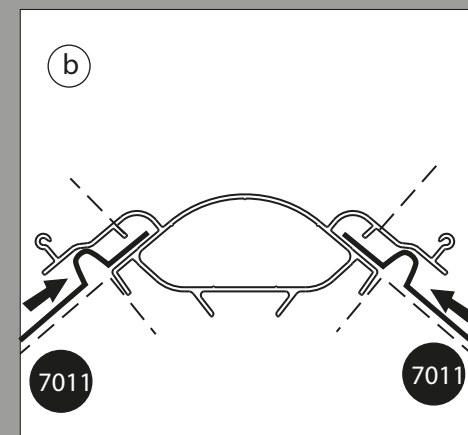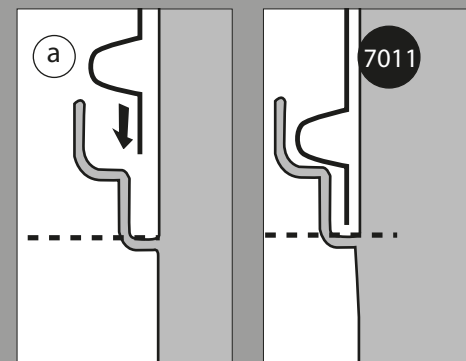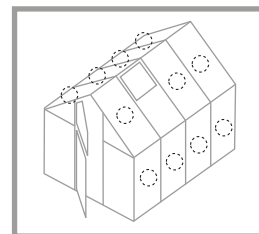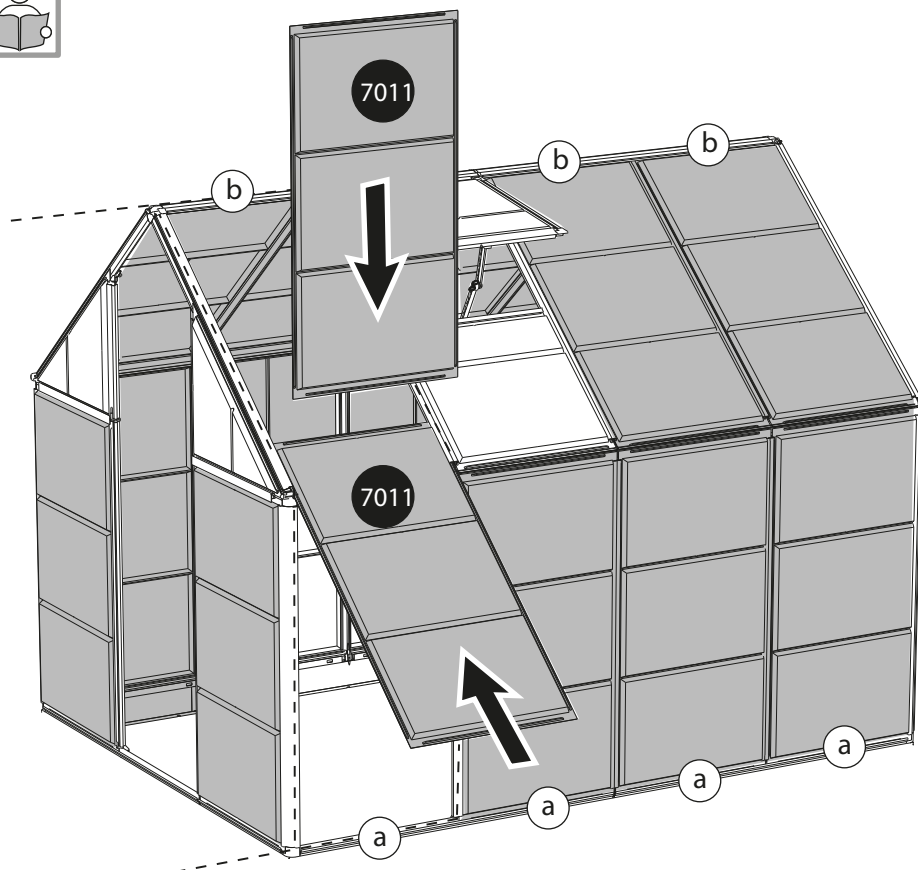


X2

19

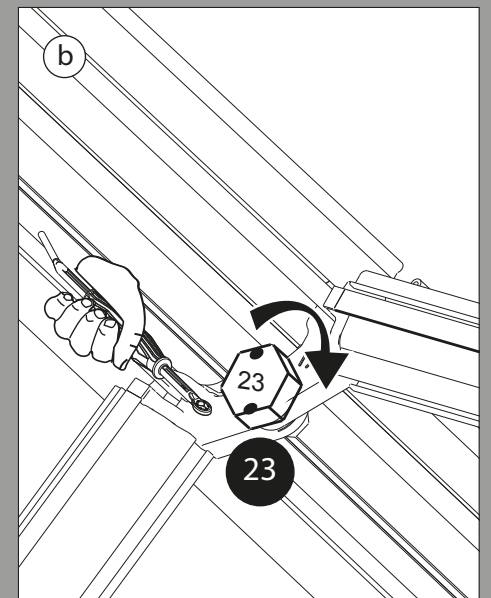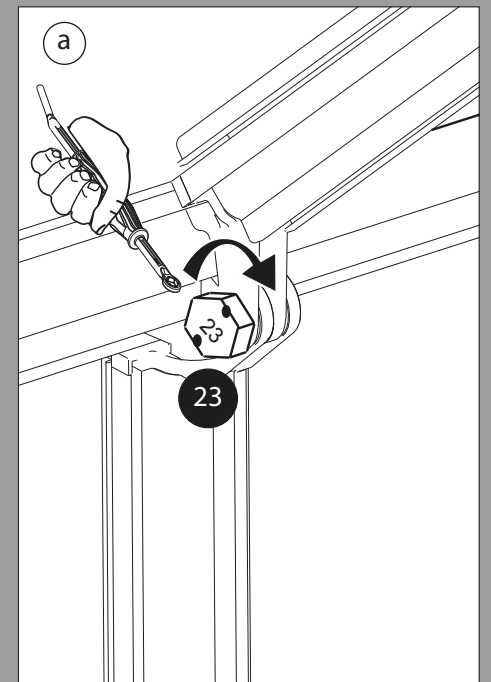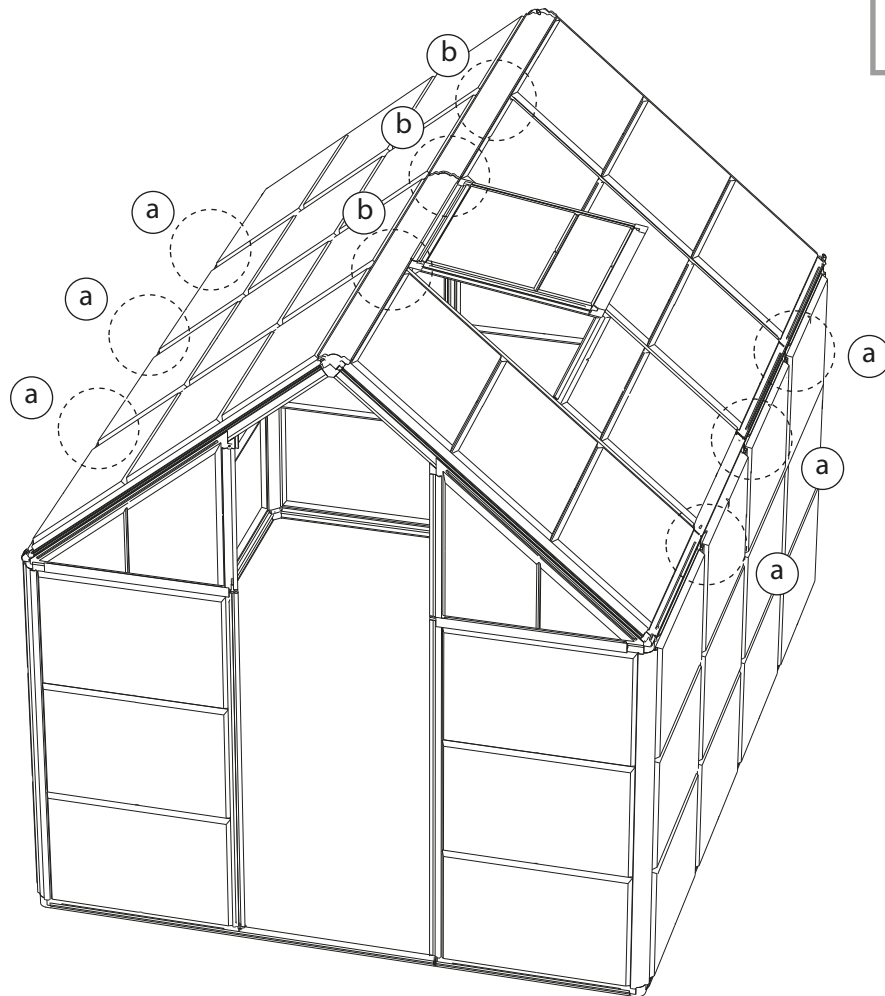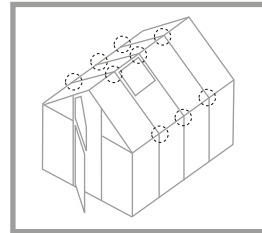


815

x 2







814

x 4




20

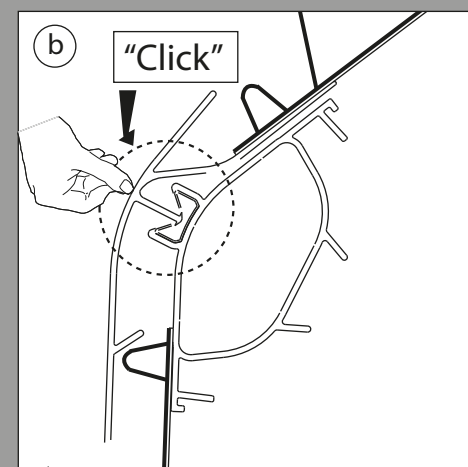
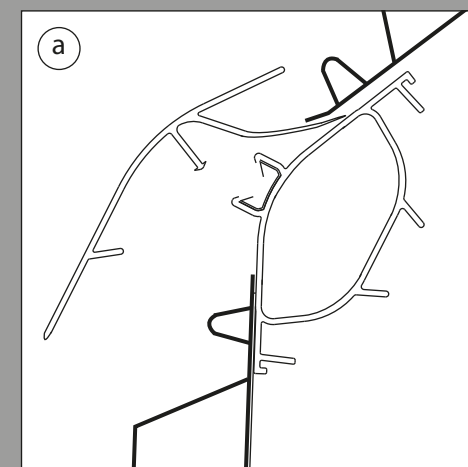
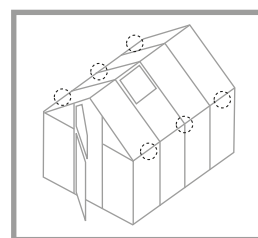
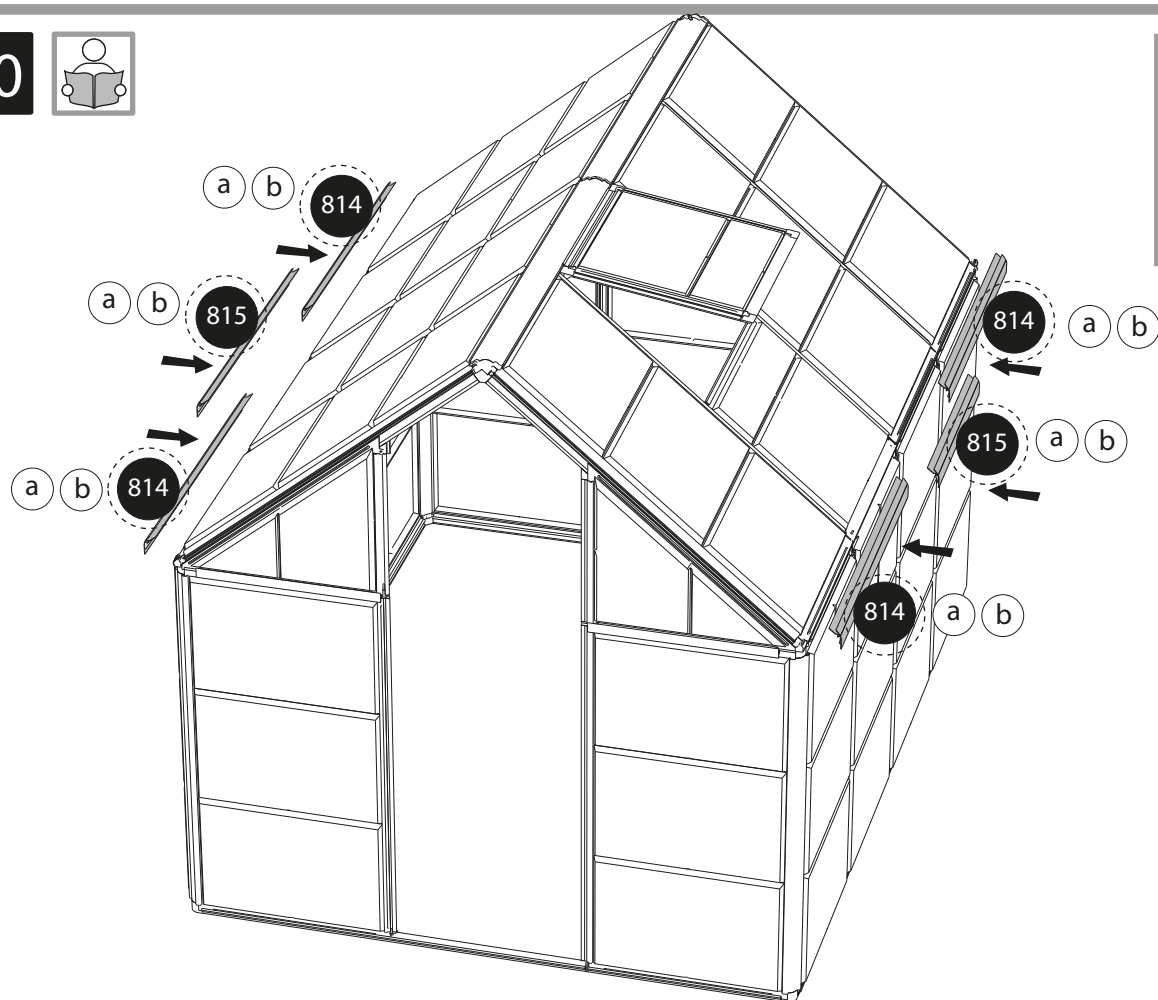


823


x 4




21

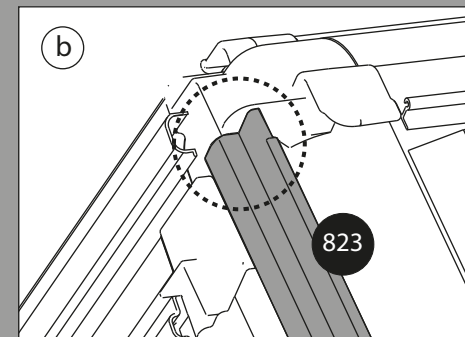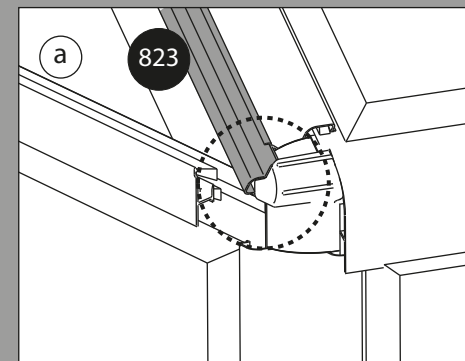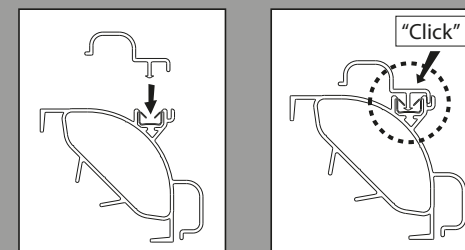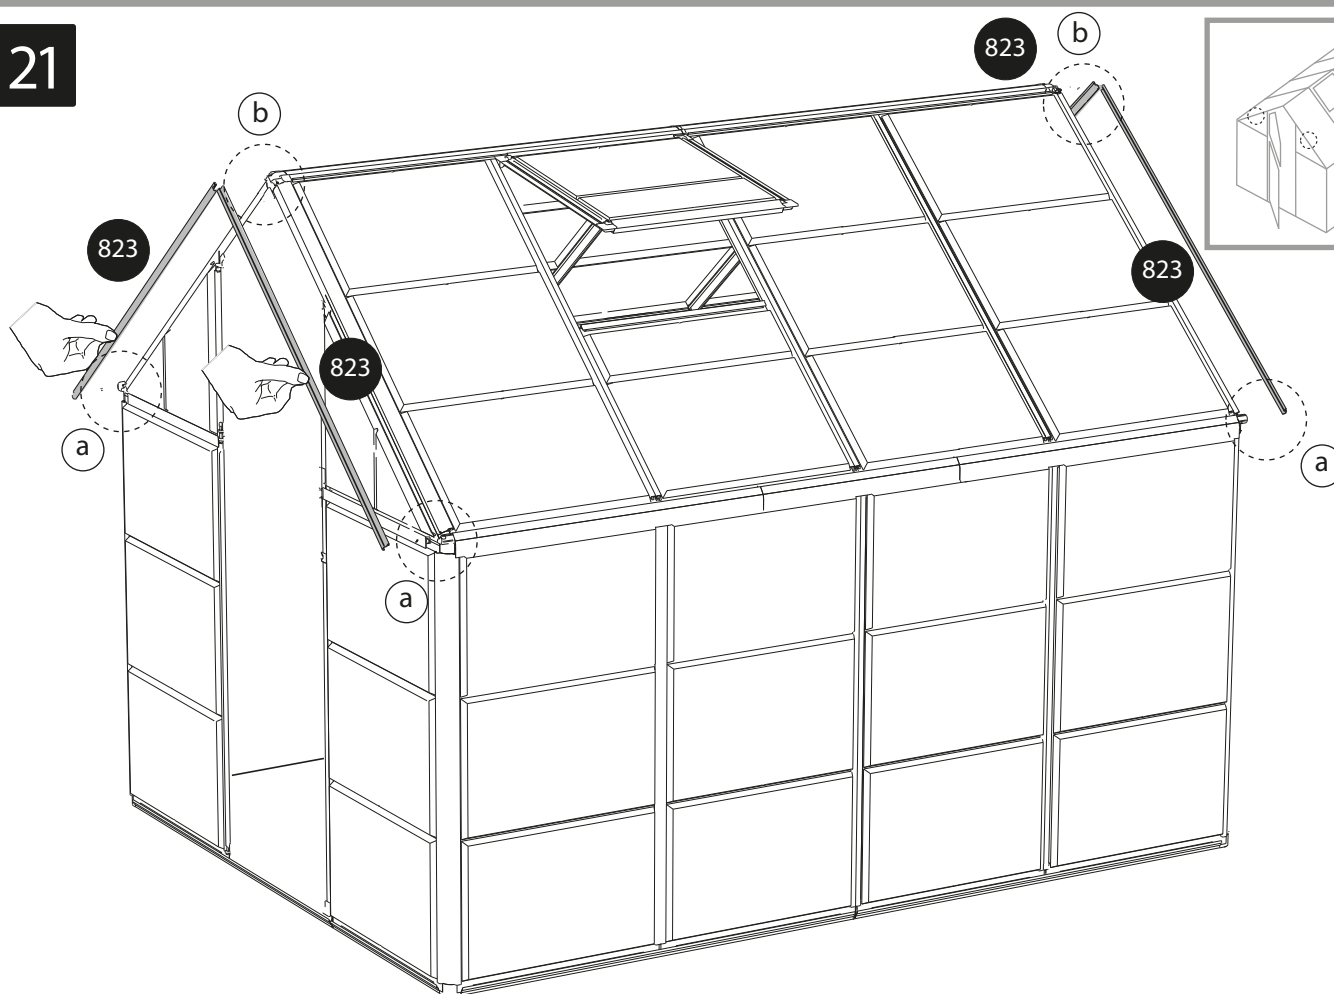


49A x 1




49B x 1




48 x 2



47 x 2

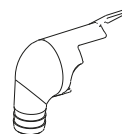


46 x 2




447 x 6









450 x 2




43 x 1

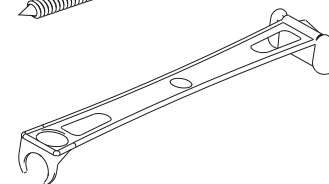


22

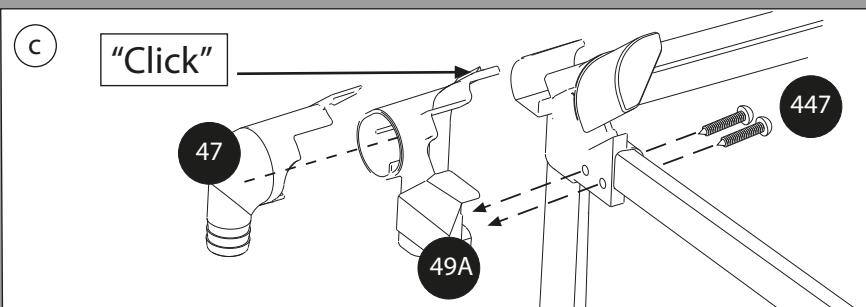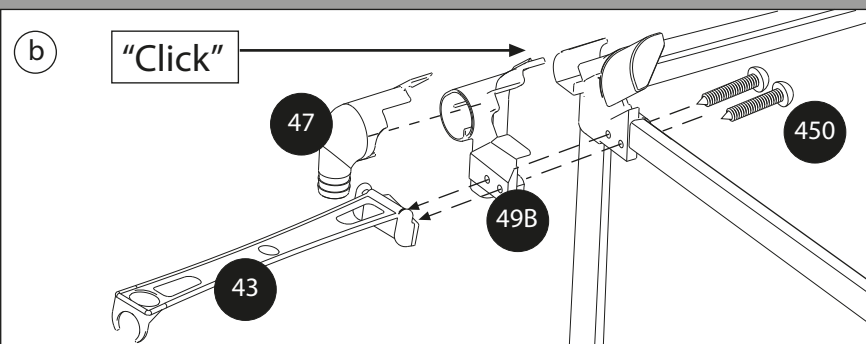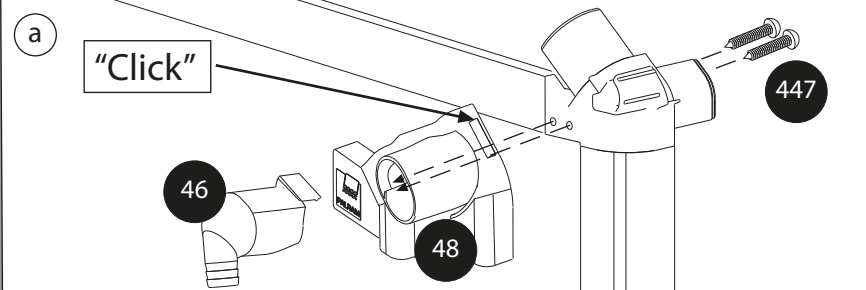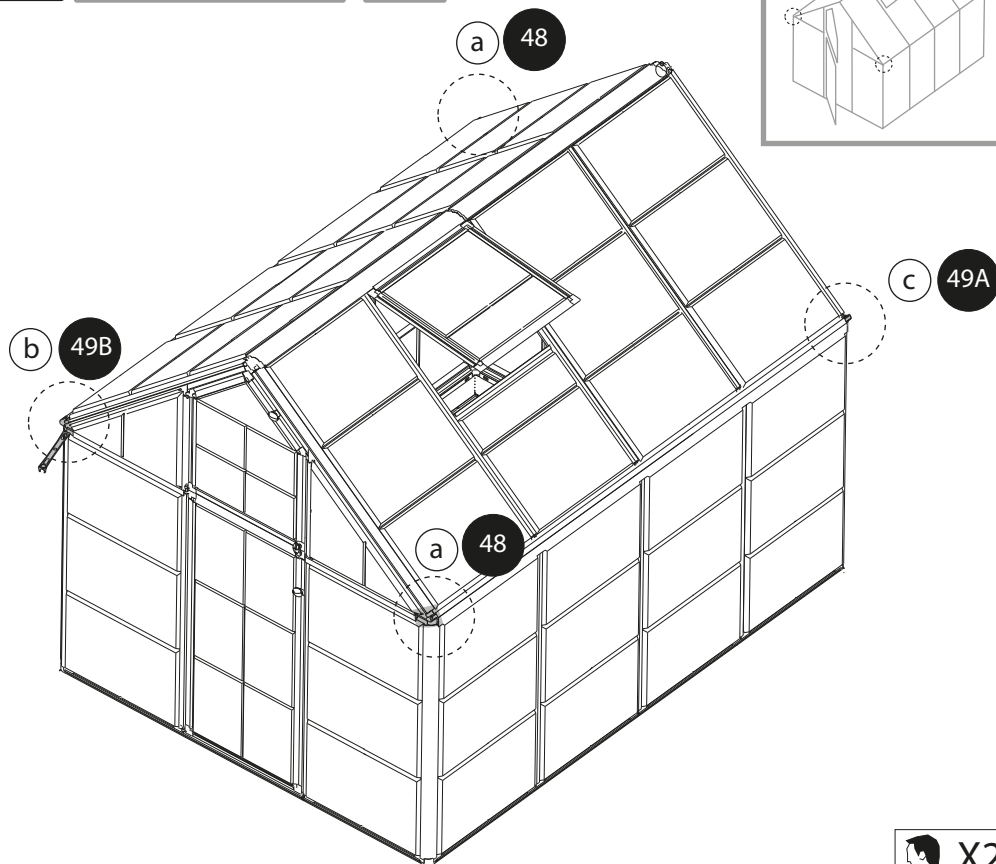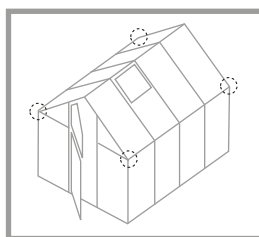


833 x 4




834 x 1




23



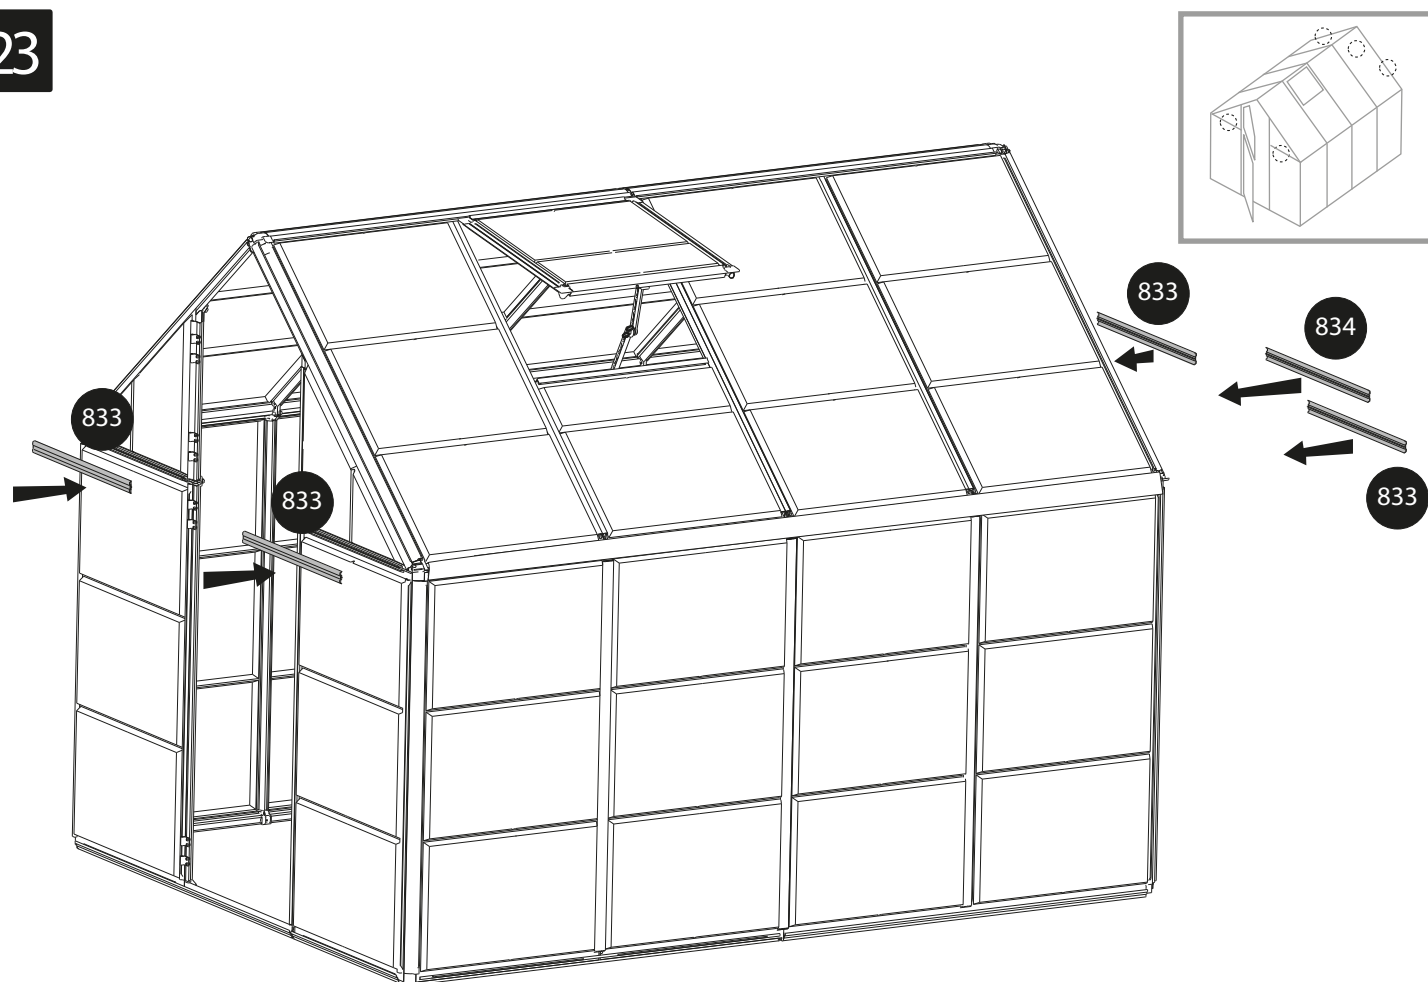


a

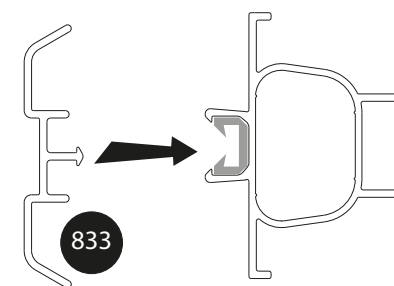

b

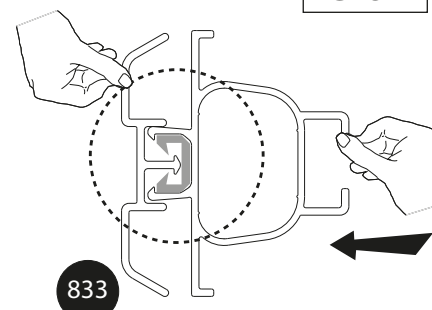

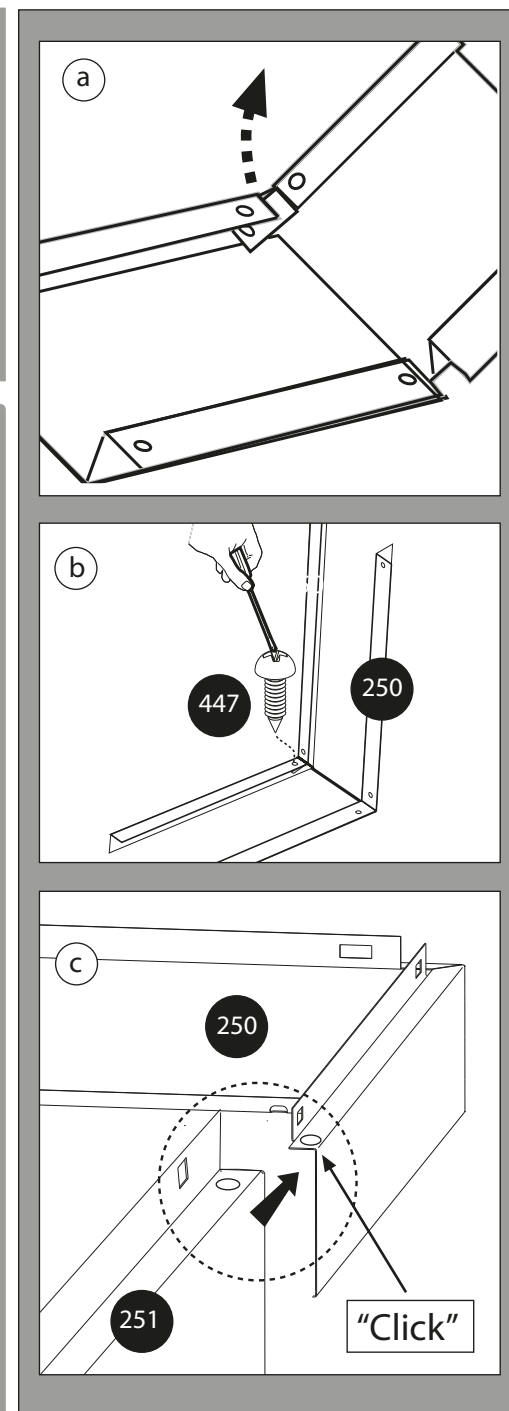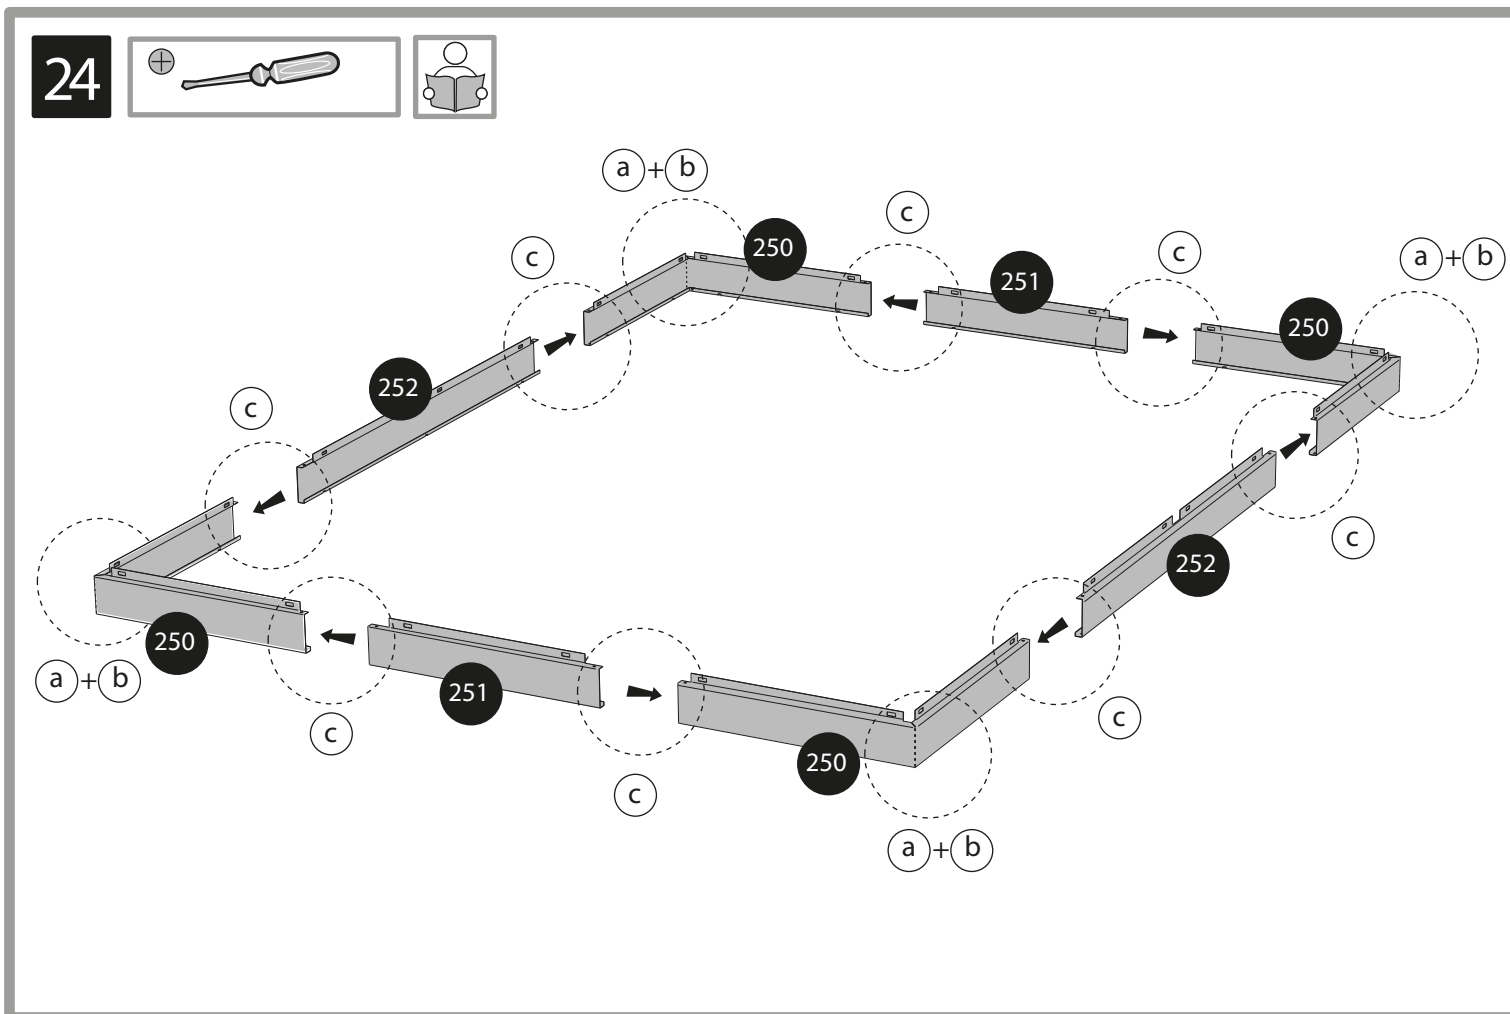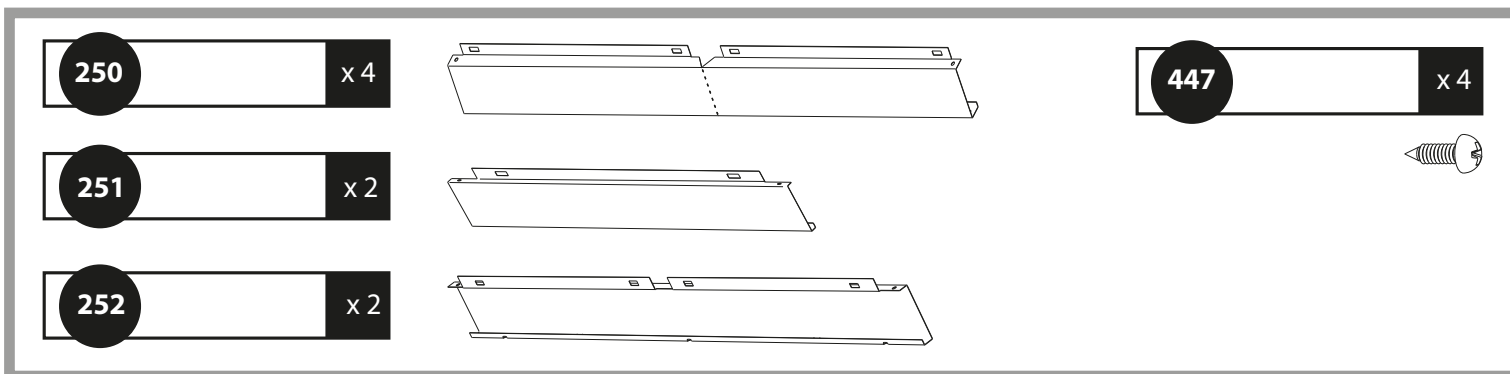

A diagram of a cantilever beam of length \$L\$. The beam is fixed at the right end and has a point load \$P\$ applied downwards at the free left end. The coordinate \$x\$ is measured from the fixed end towards the free end.



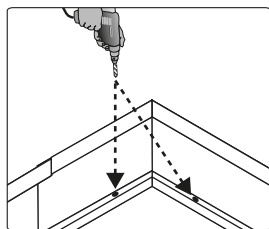


Diagram illustrating the assembly of the table top. The table top is square, with dimensions $245\text{cm} / 96\frac{1}{2}"$ and $186\text{cm} / 73\frac{1}{4}"$. The assembly involves placing wooden dowels (labeled 96) at the corners and midpoints of the sides. The diagram shows the placement of the dowels and the resulting square frame. The dimensions are given in both centimeters and inches. A note indicates $c=d$, meaning the center point is equidistant from all corners.


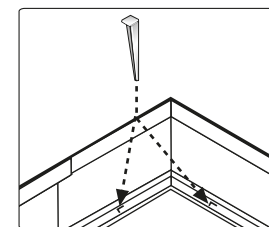


35




x 28

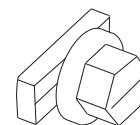

26

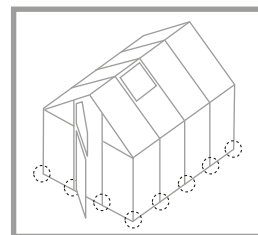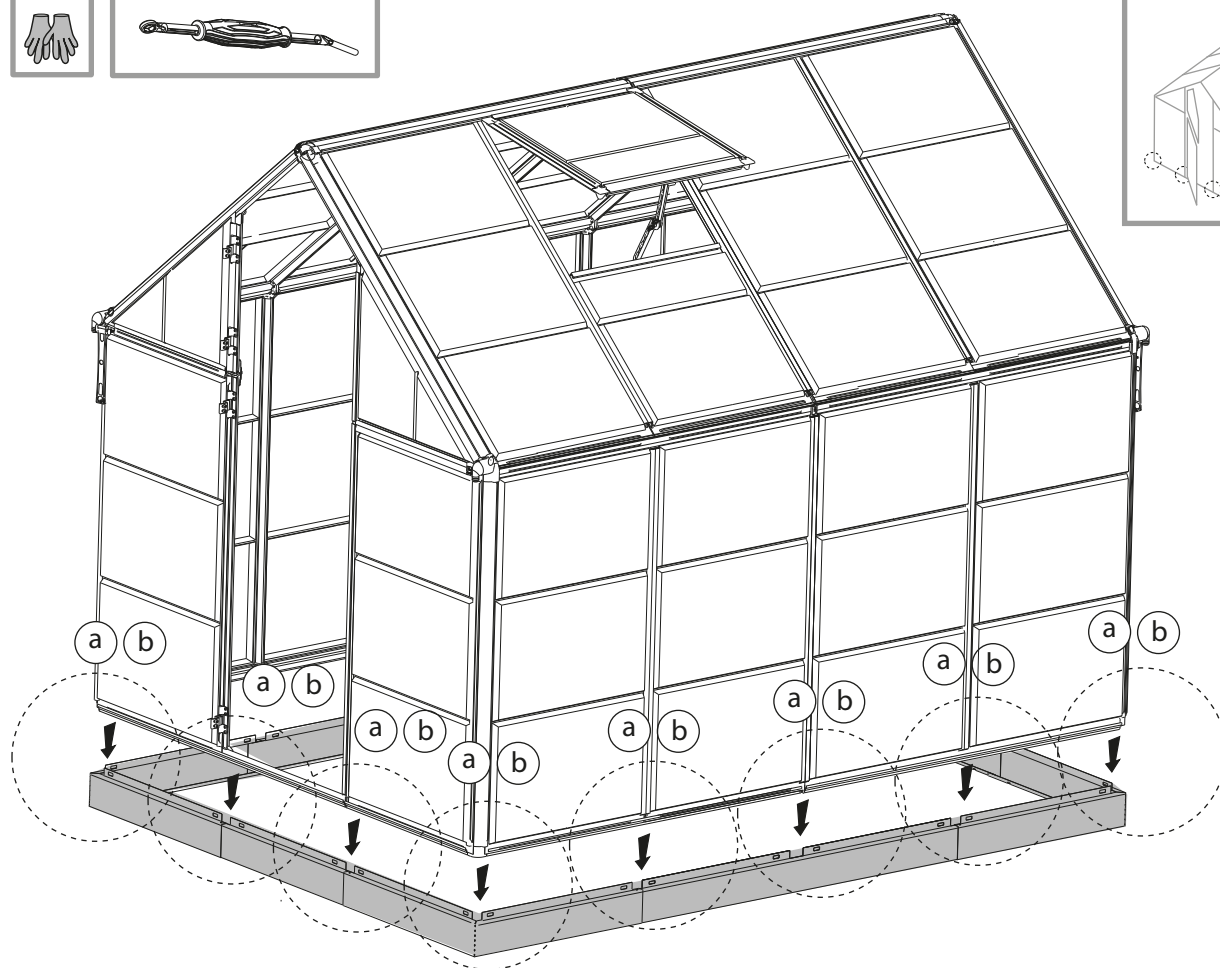


X2

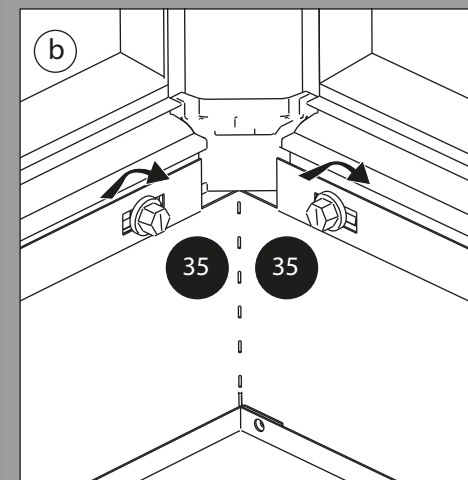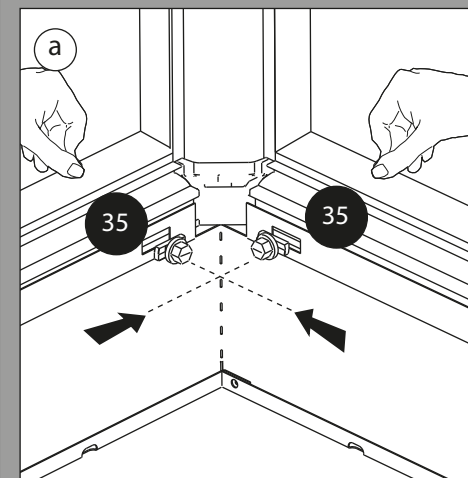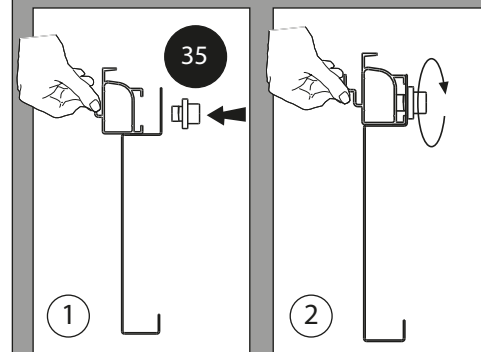


97

x 2



27

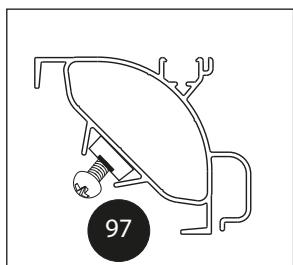

97

a

97




97

a

807

808

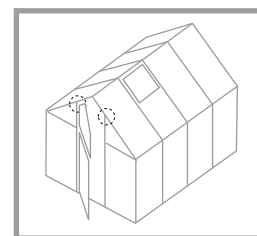

a

97



464 x 8



422 x 16





465 x 16




28




7mm

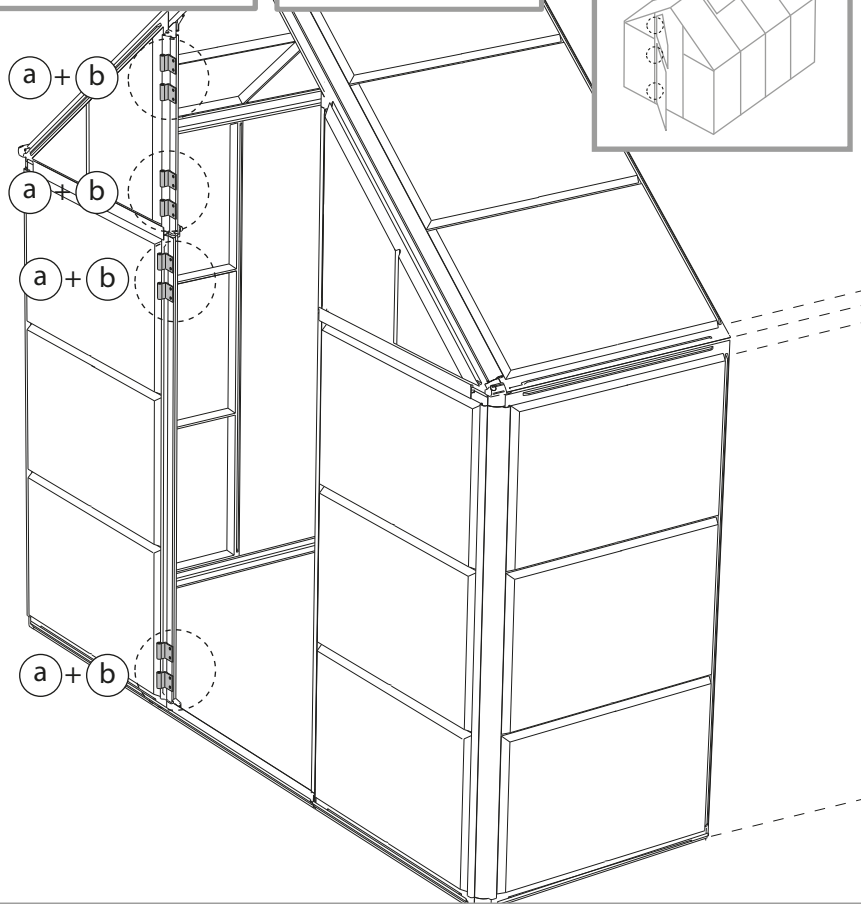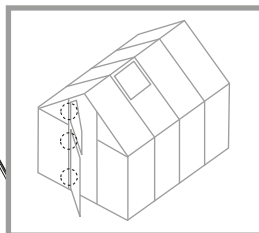




a

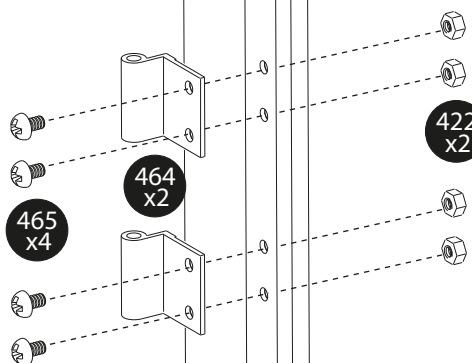

b

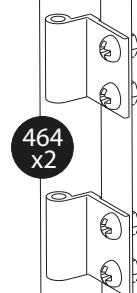


x4

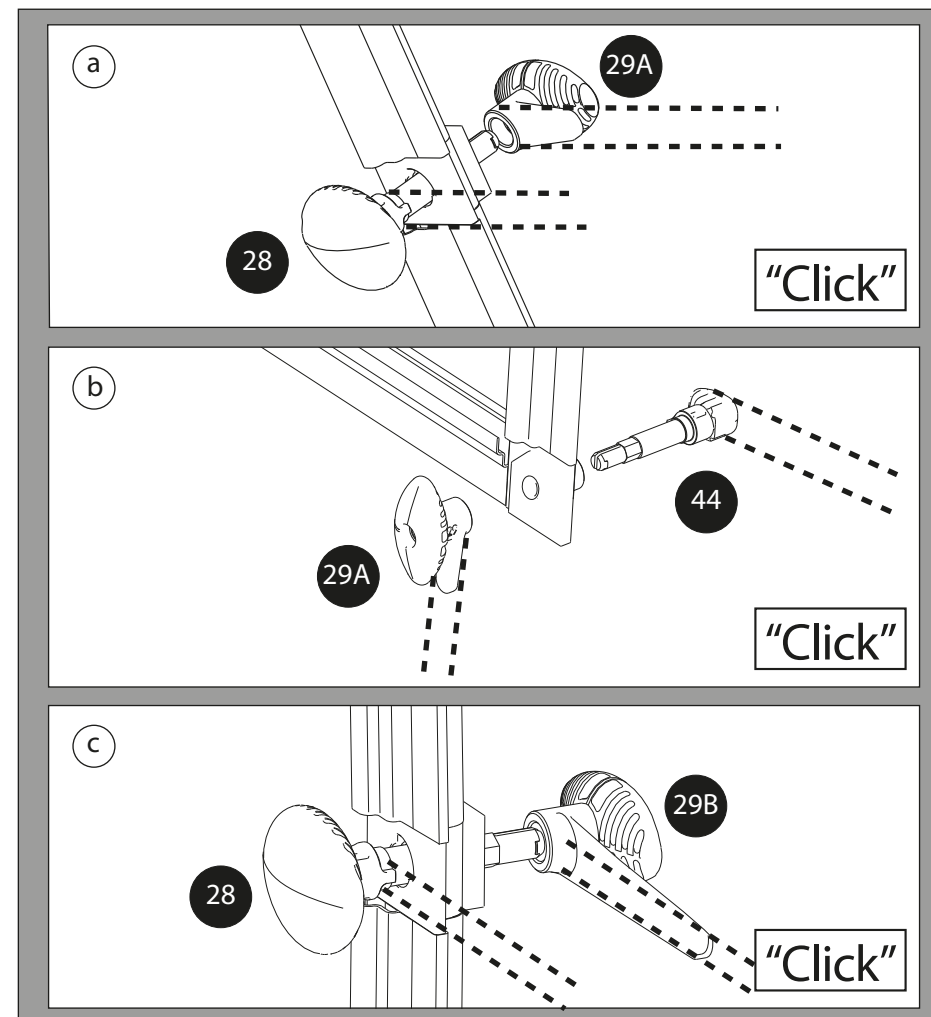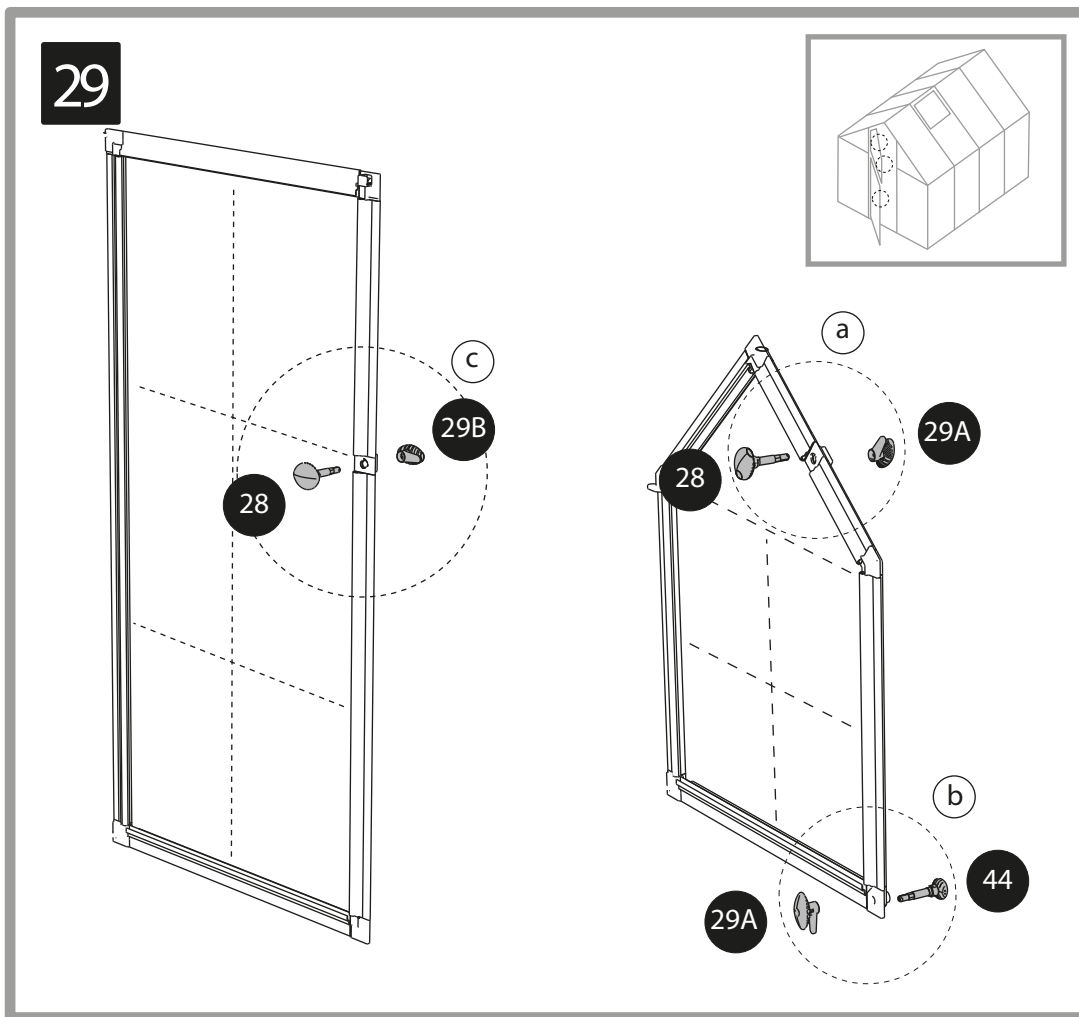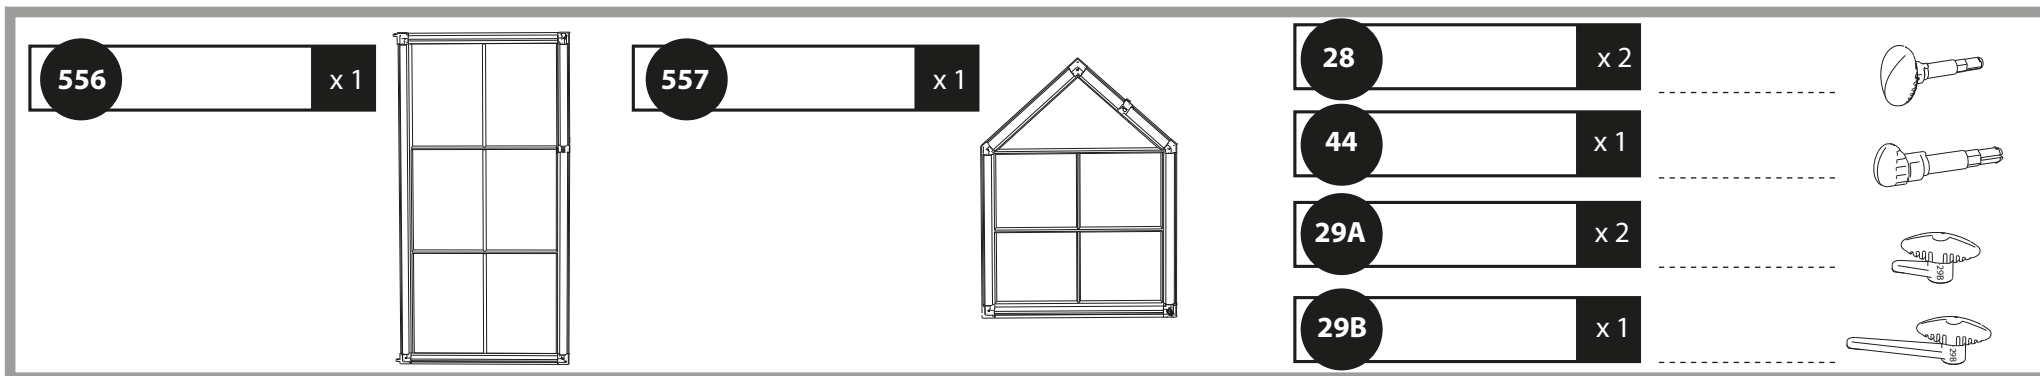

411 x 8





462 x 4




466 x 8



30

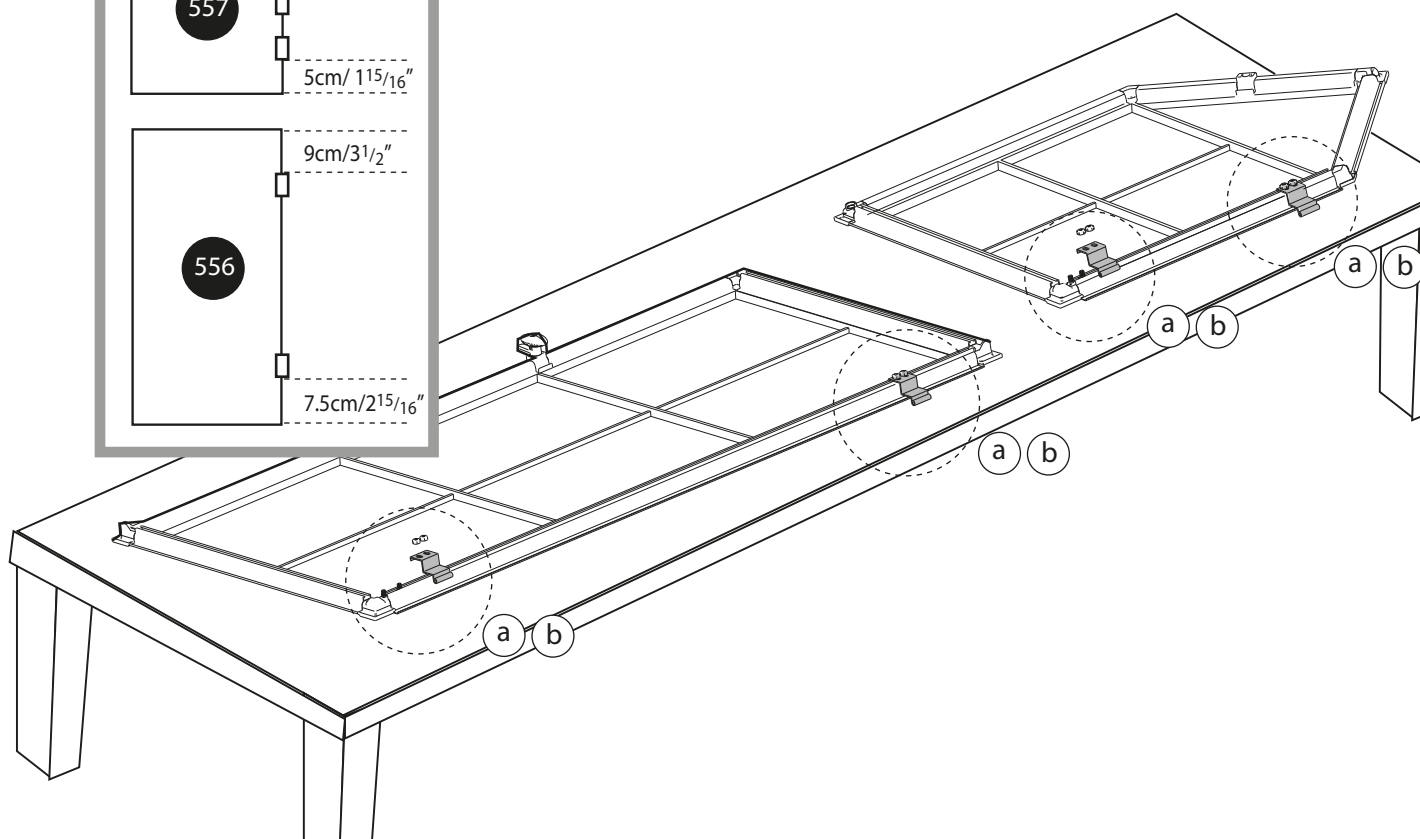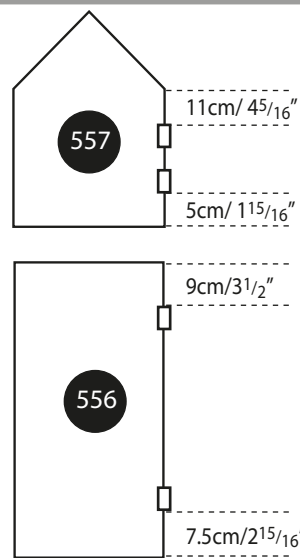


a

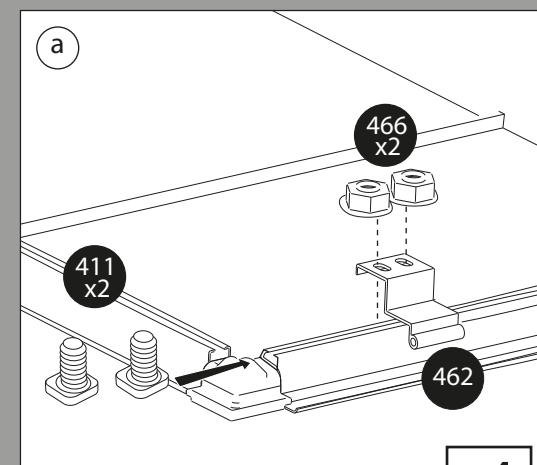

x4

b

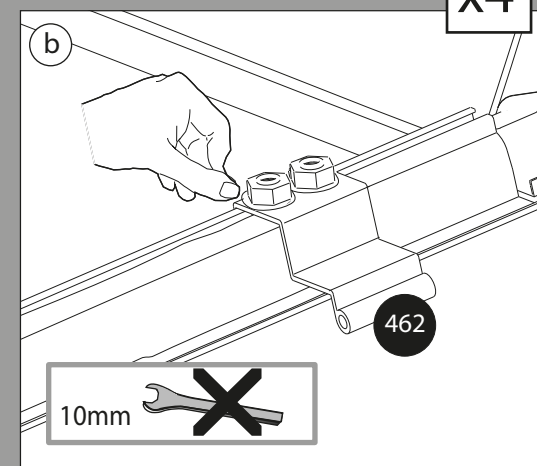

10mm



463

x 4




30

10mm




(a) + (b)

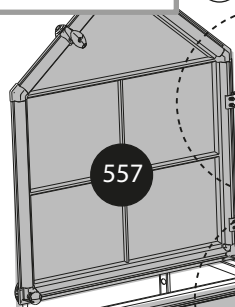


557

(a) + (b)

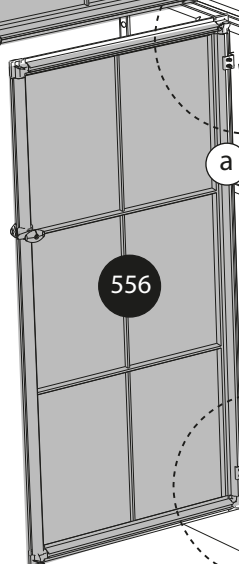


556

(a) + (b)

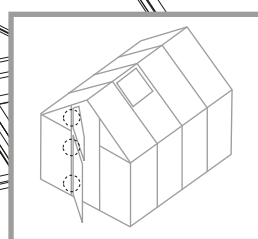


(a)

463

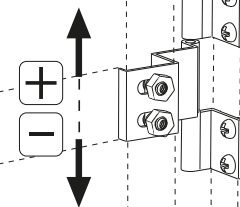

x4


(b)

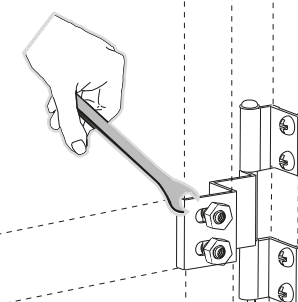

461 x 6




98A x 2



466 x 6





31






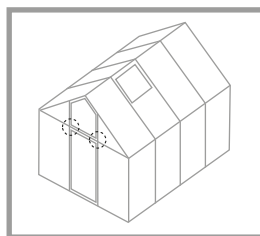


a + b

a + b

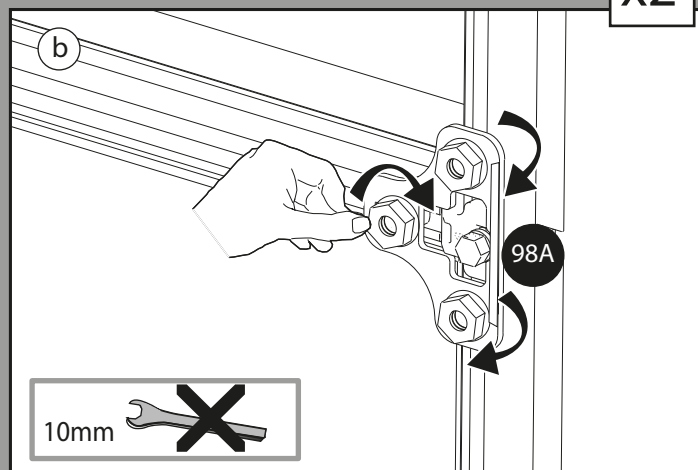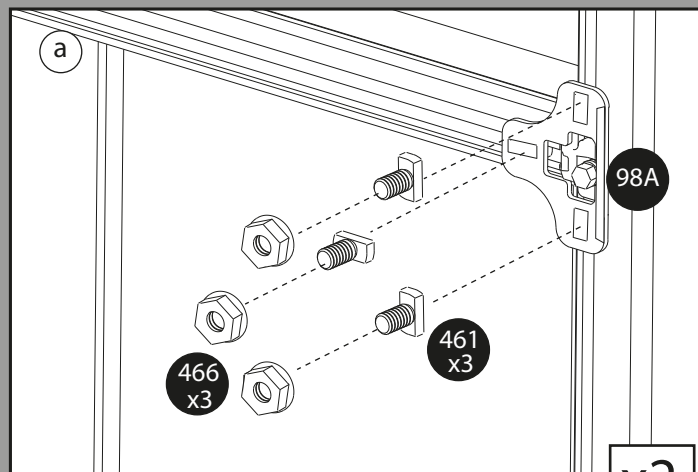





32

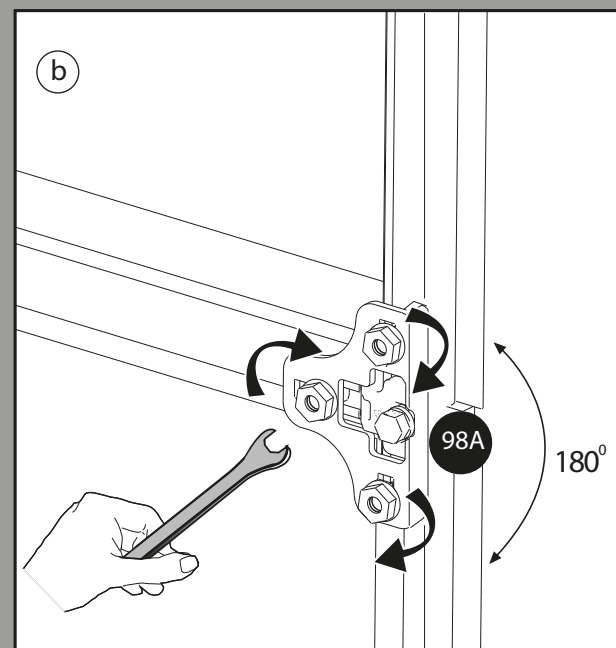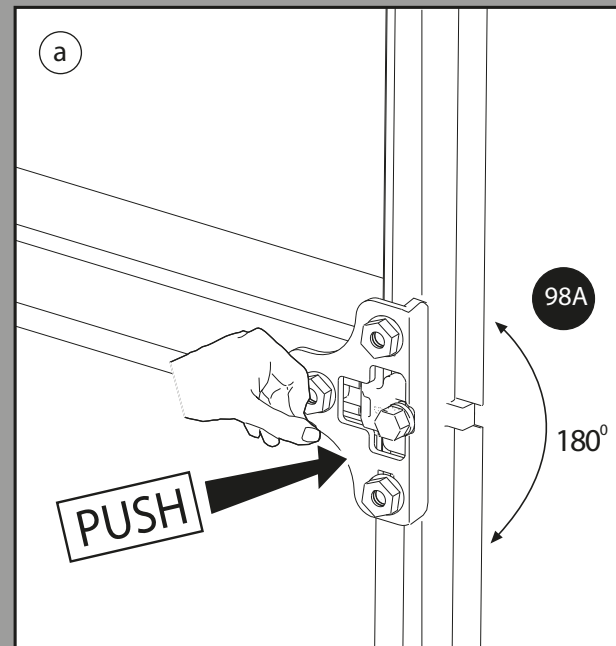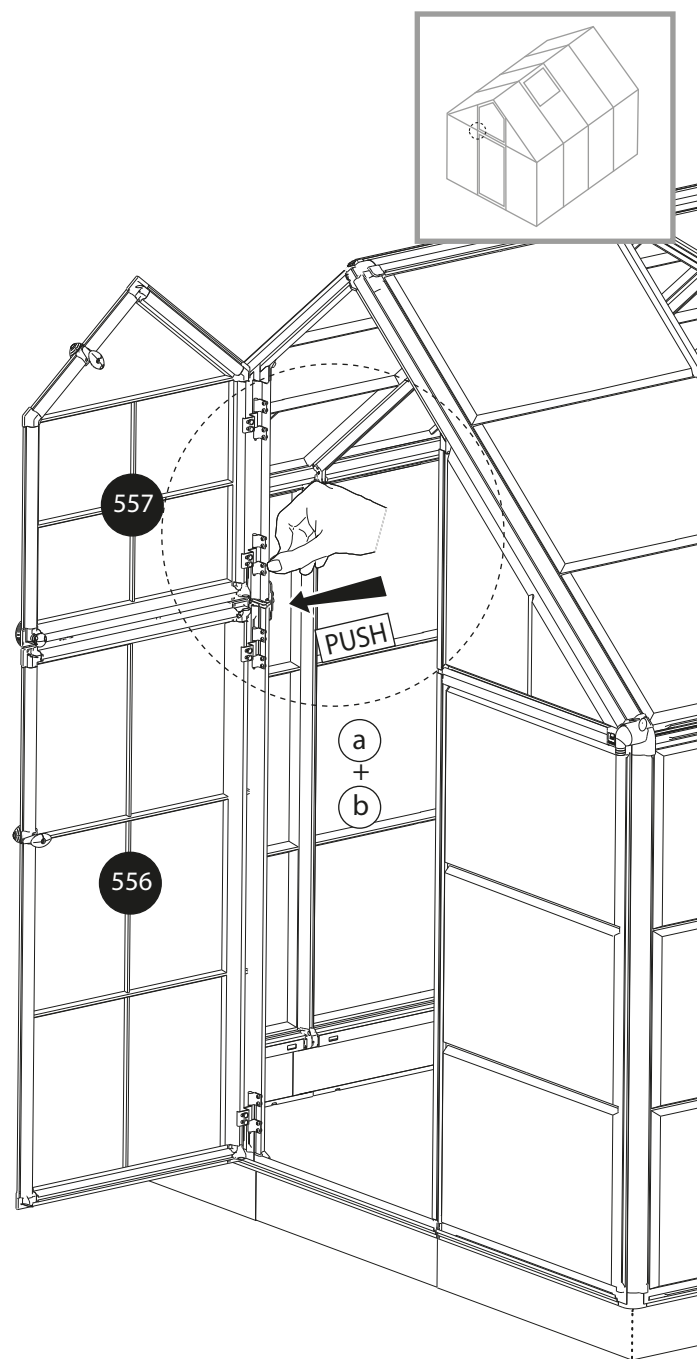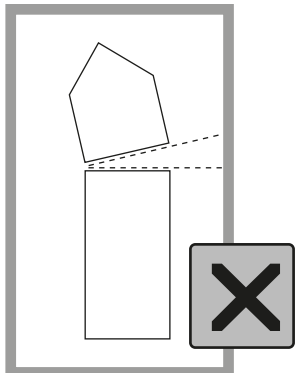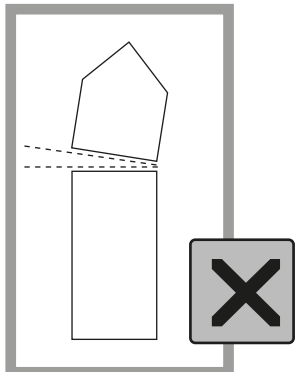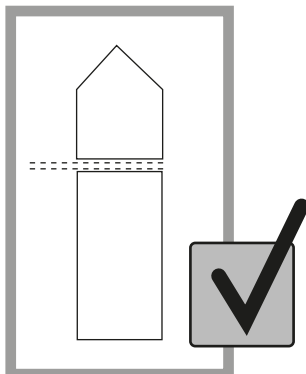

300 x 1




33

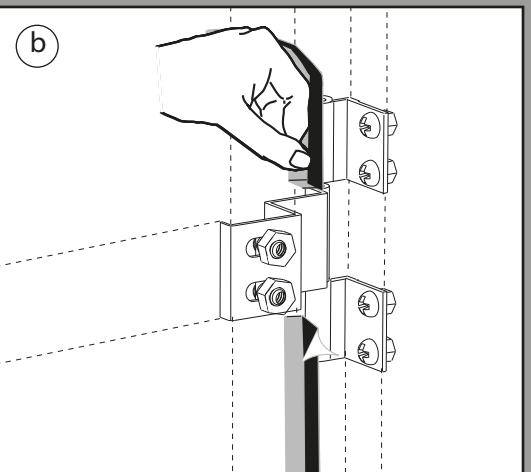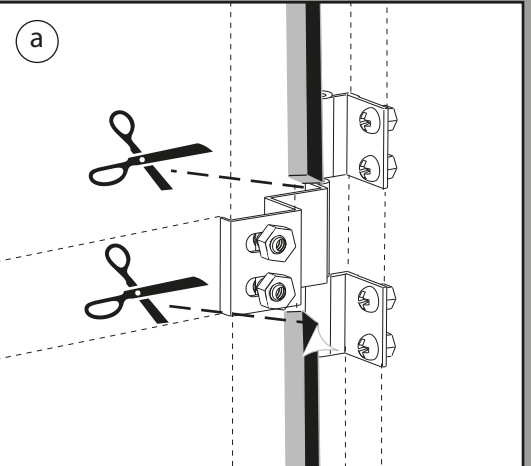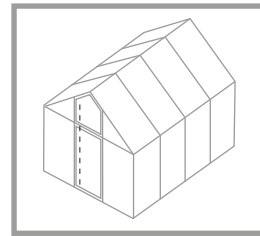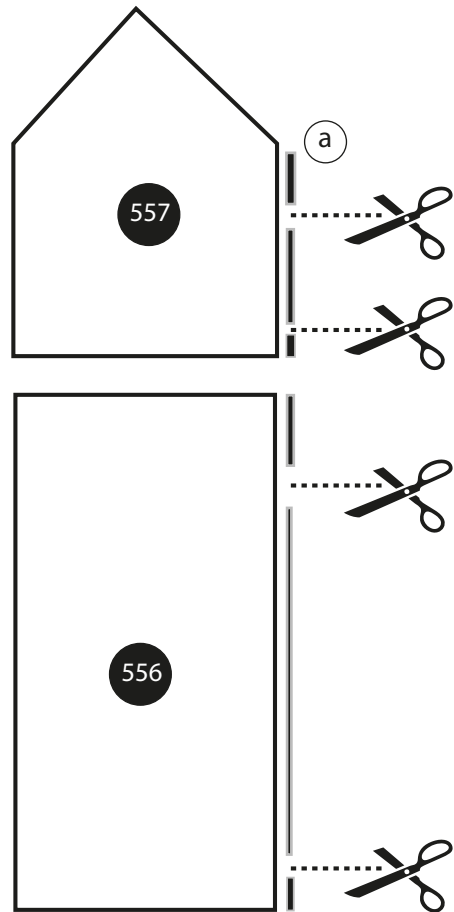

461 x 8



98B x 2

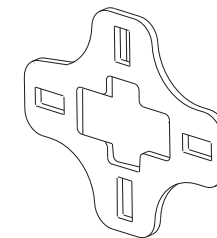


466 x 8




34

10mm

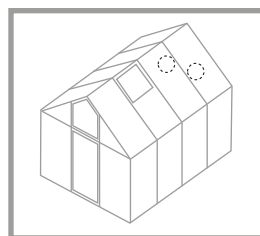


a + b

a + b

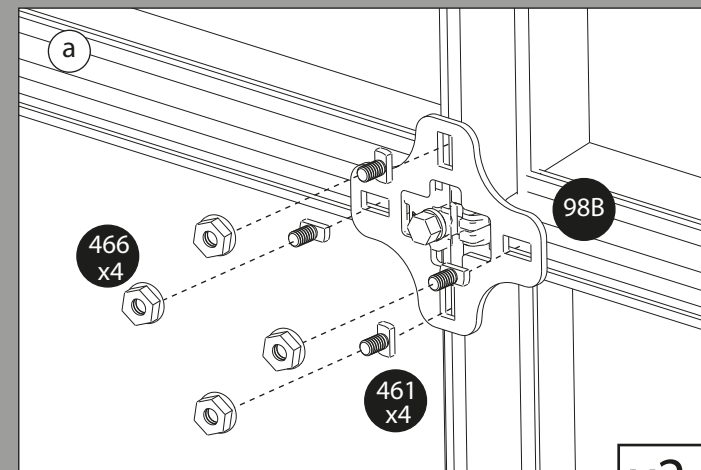

x2


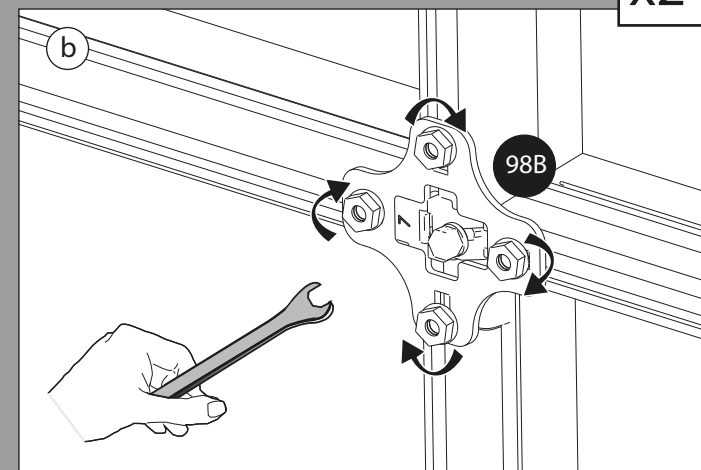



459 x 1






460 x 2

461 x 12

466 x 12




35 10mm 

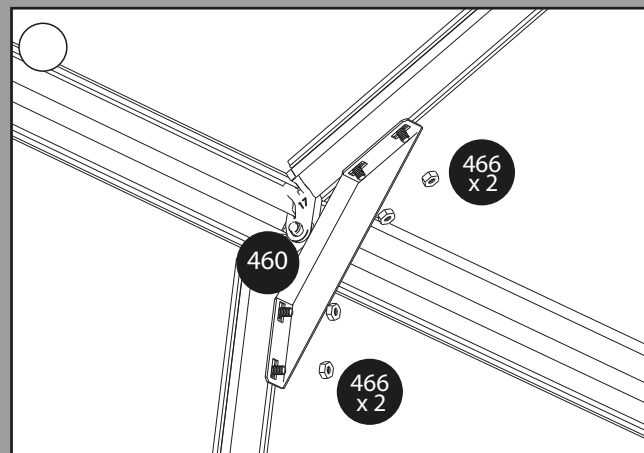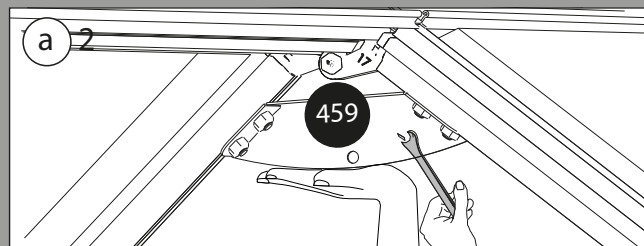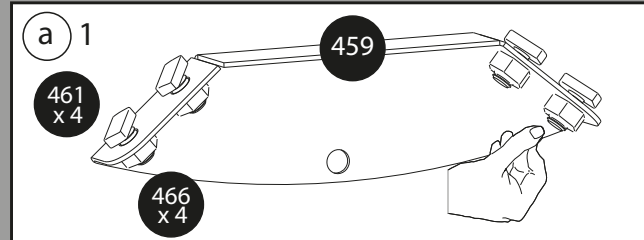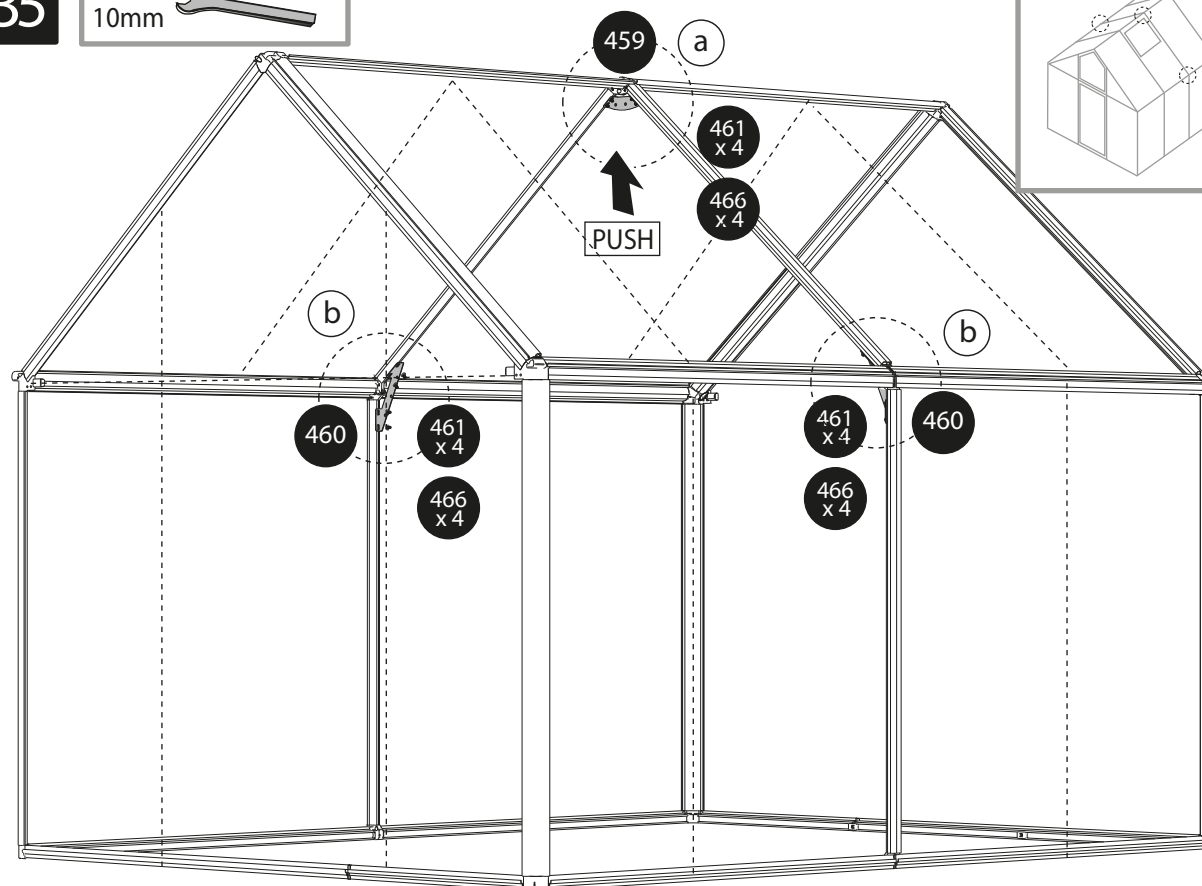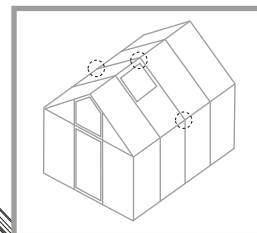

461 x 4



826 x 4



466 x 8



411 x 4



36

10mm

